

INDUCTIVE PROXIMITY SENSORS

PARTICULAR
USE SENSORS

SENSOR
OPTIONS

SIMPLE
WIRE-SAVING
UNITS

WIRE-SAVING
SYSTEMS

MEASUREMENT
SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

> LASER MARKERS

HUMAN MACHINE

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection

Safety Components

Optical Touch Switch Control Units Definition of Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B

INTERFACES

ENERGY CONSUMPTION
VISUALIZATION
COMPONENTS

PLC

Related Information

SF4B SERIES Ver.2









Conforming to OSHA / ANSI
















Protection structure IP67 New version with improved environmental resistance performance

It is possible to select from each three types of standard / robust types depending on the worksite

A wide range of variations are available with protective heights of 230 to 1,910 mm 9.055 to 75.197 in (1,270 mm 50.000 in for the finger protection type). Mixing six types in a series connection is also possible.

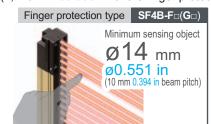





Global support for the safety of press machines or shear (paper cutting) machines

Can be widely used for press machines and other types of equipment from Japan, Europe, North America, South Korea, and China.


								• .	Available
Туре	Model No.	Machinery Directive		UL Certified	Japanese Press Machine Support	Japanese Shear (Paper Cutter) Support	S-mark certification	Korean Press / Cutting Machine	Chinese GB Compatibility
	SF4B-□ <v2></v2>	•	•	•	• ——		•		•
	SF4B-□G <v2></v2>	•	•	•	• ——		_		•
	SF4B-A□-01 <v2></v2>				• (No.TA523)	• (No.TA521)	_		•
Light curtains	SF4B-H□-01 <v2></v2>		_	_		• (No.TA522)	_		
ourtaino	SF4B-H _□ G-01 <v2></v2>	•	•	•	• (No.TA524)				•
	SF4B-F□-01 <v2></v2>								
	SF4B-□-03 <v2></v2>	•	•	•			_	•(No.09-AV4BI-0001 to 0009)	_
	SF-C11	•	•	•	(No.TA525) (Note 1)(No.TA526) (Note 2)		•		_
	SF-C12	•	•	•			_		_
Control units	SF-C13	•	•	•	(No.TA527) (Note 1)(No.TA528) (Note 2)		•		_
	SF-C14EX	•	•	•			_		_
	SF-C14EX-01	•	•	•	• (No.TA529) (Note 1) • (No.TA530) (Note 2)		_		_

Notes: 1) In combination with SF4B-A -01<V2>. (For products produced in or after October 2012)

2) In combination with SF4B-H_□-01<V2> / SF4B-H_□G-01<V2> / SF4B-H_□-01<V2>. (For products produced in or after October 2012)


APPLICATIONS

Detecting the intrusion and presence of a human being

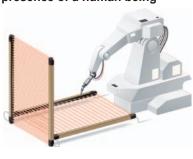




Detecting the intrusion of a human being: Example 2 By using the fixed blanking function, obstacles that always exist are ignored.

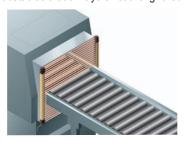

A unified response time of 14 ms for all models makes calculation work easy

A fast response time of 14 ms has been achieved regardless of the number of beam channels, the beam axis pitches and the number of units connected in series. This reduces calculation work required for the safety distance.

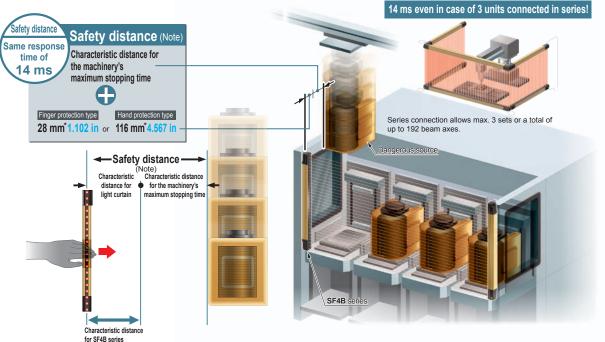

* This is the characteristic distance for the light curtain as defined by ISO 13855.


Note: Calculate the safety distance based on the distance depending on the light curtain and the distance depending on the maximum halting time of machinery. For more details, refer to p.595~. Install the light curtain according to the relevant standards of the region where the light curtain is used.

Improved environmental resistance performance and easier operability

New structure

Protection structure IP67 in a very compact size

A seamless structure with minimal joints has now been developed. The inner unit is protected by a cylindrical inner case. Seams on the unit and lens surfaces have been greatly reduced so that particles such as oil mists and dust are prevented from penetrating the case. Thus, the environmental resistance performance could be raised.

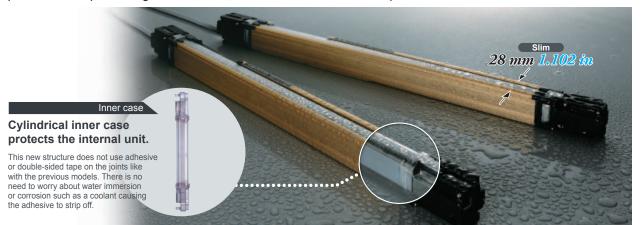

SF4B series Ver.2 has passed the tests of IP65 and IP67 as specified by IEC / JIS standards.

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

IGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Light Curtains

Safety Components Optical Touch Switch

Control Units

Definition of Sensing Heights

SF4B-C

SF4C

SF2C SF4B

3F4B

SF2B

LASER **SENSORS**

PHOTOELECTRIC

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS**

PARTICUI AR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE **INTERFACES**

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Components Optical Touch Switch

Control Units Definition of Sensing Heights

SF4B-C SF4C

SF2C

SF4B SF2B


BSF4-AH80

Error details can be understood at a glance with a digital error indicator

The system constantly checks the light curtain for problems such as incorrect cable wiring, disconnection, short-circuits, internal circuit problems, and incoming light problems. Details of any electrical problems such as at equipment startup will appear on the digital display. It is no longer necessary to count the number of times the LED blinks, making the system much more convenient.






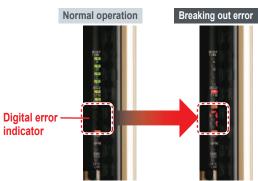



Locate problems easily and quickly by light curtain diagnosis software

Simply select the error no. that is displayed on the light curtain on the PC screen, and the section of error will be displayed visually. Coping process is also displayed for a quick resolution of the problem.

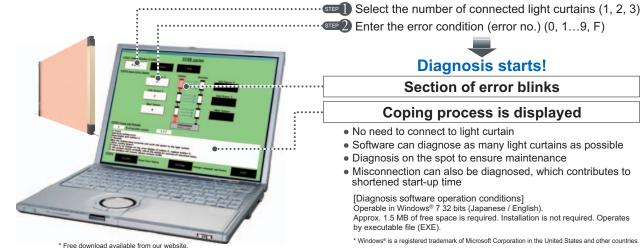

Enter the error condition (error no.) (0, 1...9, F)

Diagnosis starts!

Section of error blinks

Coping process is displayed

- No need to connect to light curtain
- Software can diagnose as many light curtains as possible
- Diagnosis on the spot to ensure maintenance
- Misconnection can also be diagnosed, which contributes to shortened start-up time


[Diagnosis software operation conditions] Operable in Windows® 7 32 bits (Japanese / English). Approx. 1.5 MB of free space is required. Installation is not required. Operates by executable file (EXE).

A muting control function is provided to increase both safety and productivity

(excluding SF4B-□-03<V2>)

The light curtain is equipped with a muting control function that causes the line to stop only when a person passes through the light curtain, and does not stop the line when an object passes through. The muting sensors and muting lamps can be connected directly to the light curtain so that a exclusive controller is not required for muting. This both reduces costs and increases safety and productivity.



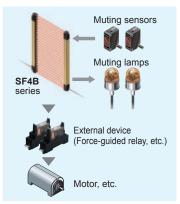

^{*} Windows® is a registered trademark of Microsoft Corporation in the United States and other countries

Override function allows the line to be restarted smoothly after it has stopped while muting control was active (excluding SF4B--03<V2>)

In case the power turns off while the light curtain has been interrupted by an object or in case the line stops before the muting conditions have been established (if only one muting sensor has been interrupted), the line can be restarted smoothly without having to remove the object that is interrupting the light curtain.

Example: When power turns off while light curtain was interrupted




Object must be removed before restart


Smooth restart

Equipped with a safety circuit that does not require an exclusive safety relay unit

The light curtain has a built-in external device monitoring function (such as for monitoring whether relays have fused) and an interlock function. The safety circuit is built without safety relay unit and size reduction of a control board is achieved, which contributes to cost reduction.

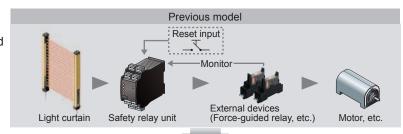



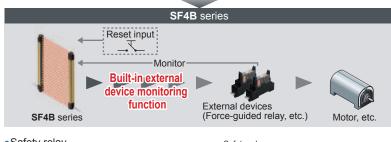


•Safety relay Panasonic Corporation SF series



Note: Contact the manufacturers for details on the recommended products.

Beam-axis alignment indicators show the incident light position at a glance

Beam-axis alignment indicators display the beam channels of the light curtain in four blocks. When the beam channel at the bottommost channel (or topmost channel), which is used as a reference for beam-axis alignments, is correctly aligned, the LED blinks red. After this, each block lights red as the beam axes successively become aligned. When all channel beam axes are aligned, all LEDs light green. The display also has an additional stability indicator (STB) so that setup can be carried out with greater stability.

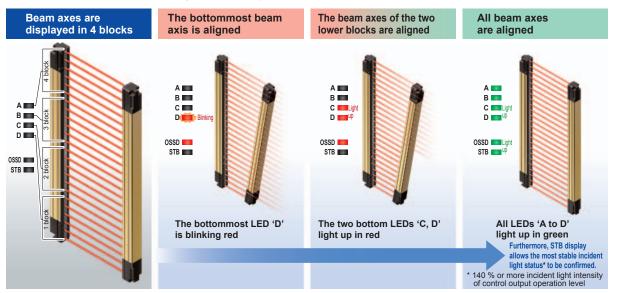

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING

Selection Guide

Light Curtains
Safety
Components

Optical Touch Switch

Control Units

Definition of

Sensing Heights

SF4B-C

SF4C

SF2C SF4B

SF2B

LASER **SENSORS**

PHOTOELECTRIC

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

SENSORS PARTICUI AR USE SENSORS

INDUCTIVE PROXIMITY

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE **INTERFACES**

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING

Selection

Components

Optical Touch Switch

Control Units

Definition of Sensing Heights

SF4B-C


SF4C SF2C

SF4B

Supports both PNP and NPN polarities in a single model FIBER SENSORS

NPN circuit 24 V O

The SF4B series combines PNP transistor output and NPN transistor output in a single model. Overseas equipment that uses PNP, replacement with NPN sensors, factories that are positively grounded, and transfer of equipment overseas are all situations where the control circuits for a single model are suitable for use a.

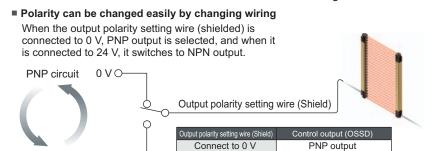

Connect to 24 V

Not connected / open




PNP / NPN polarity indicator Either PNP or NPN side lights depending on which is selected.

NPN output Error

Greatly improved ease of installation (excluding SF4B-GG)

The tool performs beam-axis alignment using a laser beam spot. As the tool is battery-operated, it is possible to perform beam-axis alignment before supplying power to the equipment.

Laser alignment tool for easy installation

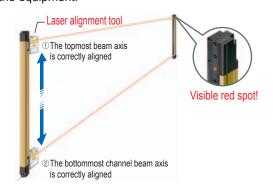


The hexagon-socket head bolts used for aligning the beam axis can be accessed from the front of the light curtain. Beam adjustment can be carried out easily

while turning the bolts. Also, the beam-axis alignment part is directly and firmly fixed with M5 bolts so that beam axes misalignment can be prevented.



Easy to distinguish receiver and emitter

Emitter is gray, receiver is black. Whether during startup or maintenance, troubles due to incorrect wiring or false recognition can be greatly reduced. Moreover, the model No. can be checked at the front face of the light curtain.

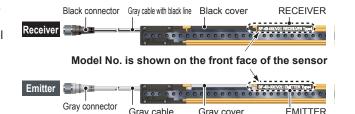

Mutual interference is reduced without needing interference prevention lines

The light curtain is equipped with the ELCA (Extraneous Light Check & Avoid) function. Because it automatically shifts the scan timing of the light curtain in order to avoid interference, it is not necessary to wire interference prevention lines between machineries.

Reducing the number of malfunctions caused by extraneous light

Double scanning method and retry processing are two new functions exclusive to our company, which successfully eliminate the effects of momentary extraneous light from peripheral equipment. The reduction in operating errors caused by extraneous light reduces frequent stopping of machinery.

Resistant to impact, less damage to workpiece Thick and robust housing resistant to impact

The SF4B-□G□<V2> light curtain is enclosed in a 5 mm (0.197 in) thick robust metal case, protecting the workpiece from various types of impact, such as collision or being stepped on.



Stepped on - Kicked





Loads applied - Dropped

Dmm 0.197 in

Robust type SF4B-□G□<V2>

SF2B BSF4-AH80

PHOTOELECTRIC

PHOTOELECTRIC SENSORS

LASER


SENSORS

MICRO

AREA SENSORS


No guard needed

The robust light curtain can be used without an L-shape or U-shape guard, reducing installation and maintenance.

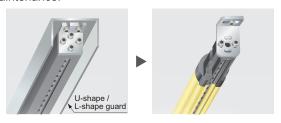

Fully protected sensing surface

The sensing surface is fully protected by narrowing and deepening the exposed area of the sensing surface.

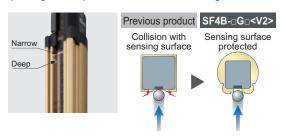

Front protection cover

The front protection cover protects the sensing surface from welding spatter and reduces damage due to collisions. The beam axis adjuster can be attached without removing the front protection cover.



Protection structure IP67

The seamless structure protects the sensor from being exposed to water.

S

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS


FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Round design minimizes damage to the workpiece

The case is designed so that shock upon impact is dissipated alleviating potential damage to the workpiece in the event of a collision.

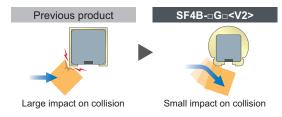


Workpiece not contaminated with paint

The body has an alumite-treated case so that paint does not stick to the workpiece in the event of a collision.

Enables series connection with standard type possible

The mating cable is standard, allowing the robust and standard types to be connected in series.

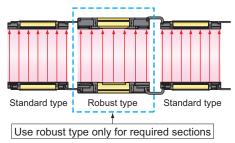

Mounting bracket for simple & secure installation

The light curtain and the mounting bracket are firmly secured with just two bolts. The light curtain is situated in the center of the mounting bracket, preventing beam axis deviation. The dimple structure makes alignment easy to adjust.



Black and yellow caution tape

Black and yellow striped attention tape is attached to the side of the light curtain, alerting workers to use caution. Hazardous openings are very obvious.



Caution tape
• SF-TP-BG10

Special tape

- · Fit to width of light curtain
- Made of fabric, making it easy to cut

Selection Guide Light Curtains Safety Components

Optical Touch Switch

Control Units

Definition of Sensing Heights

SF4B-C

SF4C

SF2C SF4B

SF2B

LASER SENSORS

PHOTOELECTRIC

MICRO PHOTOELECTRIC SENSORS

> AREA SENSORS

LIGHT CURTAINS A SAFETY COMPONENTS PRESSURE

FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

> LASER MARKERS

> > PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units

Sensing Heights

SF4B-C


SF4C

SF2C SF4B SF2B

BSF4-AH80

A large reduction in cost by using corner mirror (optional)

A single corner mirror makes it possible to eliminate one light curtain set and its associated peripheral safety circuits. This enables costs to be greatly reduced, and also eliminates wiring needs. Control categories also remain unchanged.

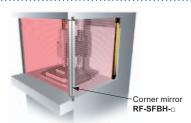

Normally for L-shaped or U-shaped installation, 2 or 3 sets of light curtains are needed. With the use of a corner mirror reflecting the light, one set of light curtain is possible for L-shaped or U-shaped installation

Handy-controller SFB-HC (optional) that enables the user to select a variety of settings


Separate muting control function for each beam channel

The handy-controller **SFB-HC*** (optional) can be used to carry out muting control for specified beam axes only. Because individual beam axes can be specified to suit the object, separate guards to prevent entry do not need to be set up.






For example, depending on the height of the object, the muting function can be activated for 10 beam channels starting from the bottom, so that if the 11th or subsequent beam channels are interrupted, it is judged that a person has entered the area and the line stops.

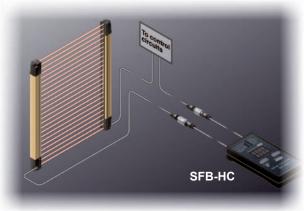

* A handy-controller cannot be used with the SF4B-□-01<V2>, SF4B-H□G-01<V2>, SF4B-□-03<V2> and the SF-C14EX-01.

Specific beam axes can be deactivated The SF4B series incorporates a fixed blanking function.

The SF4B series is equipped with a fixed blanking function which allows specific beam channels to be selectively interrupted without causing the control output (OSSD) to output the OFF signal. This function is convenient for use with applications in which certain fixed obstacles tend to block specific beam channels. Furthermore, this function provides greater safety as the control output (OSSD) will automatically output the OFF signal if the fixed obstacles are subsequently removed from the sensing area.

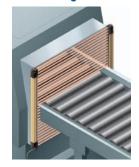

A variable number of beam axes can be deactivated The SF4B series incorporates a floating blanking function.

1, 2 or 3 non-specified beam channels can be deactivated. If the number of beam channels that are blocked is less than or equal to the set number of beam channels, then the control output (OSSD) will not output the OFF signal. This function is useful in the event when the positions of obstacles within the sensing area must be changed during object rearrangement, or when an object passes through the light curtain's sensing area.



Note: When the floating blanking function is used, the acceptable size for the minimum sensing object changes. Refer to "PRECAUTIONS FOR PROPER USE" for details.

Selectable configuration for auxiliary output

Mode No.	Description
0	Negative logic of the control output (OSSD 1, OSSD 2) (factory setting)
1	Positive logic of the control output (OSSD 1, OSSD 2)
2	For emission: output ON, For non-emission: output OFF
3	For emission: output OFF, For non-emission: output ON
4	For unstable incident beam: OFF (Note 1)
5	For unstable incident beam: ON (Note 1)
6	For muting: ON
7	For muting: OFF
8	For beam received: ON, For beam interrupted: OFF (Note 2)

Notes: 1) The output cannot be used while the fix blanking function, floating blanking function or the muting function is activated.

 This device outputs the beam received / interrupted state at the detectable area regardless of fixed blanking function, floating blanking function, and muting function.

For beam received: OFF, For beam interrupted: ON (Note 2)

A variety of other functions can be selected

Emission intensity control function

This function reduces the amount of emitting light. The two modes, normal mode and short mode, can be selected (factory setting: normal mode).

Monitoring function

This function allows the user to confirm the details of each light curtain setting.

Protection function

A password protection can be used to avoid unauthorized changes of the settings (factory setting: no password protection).

Copy function

Setting details can be copied to other light curtains. This is helpful if you need the same settings on different devices.

Muting lamp diagnosis setting

When the muting lamp diagnosis is disabled, the muting function will continue to operate even if the lamp is blown.

Lineup of exclusive control units





SF-CL1T264T

Supports both PNP and NPN polarities SF-C10 series

The **SF4B** series enables the changeover of PNP/NPN inputs in a single model for reduction of registered model No.

Connector connection control unit SF-C11

The wiring with the light curtain is simple connector connection. It reduces time for installation and replacement.

Robust type control unit

The safety relay is built in the robust metal casing. As the protection structure is IP65, it is possible to install **SF-C12** independently without putting it into the control board.

Thin control unit

22.5 mm 0.886 in thinness has been realized. Possible to install in a small space of the board.

Application expansion unit SF-C14EX(-01)


The three safety systems; light curtain output, muting control, emergency stop button have been integrated into a single unit.


Remote I/O unit

SF-C12

By connecting the light curtain / safety units with the safety field network CC-link safety, networking and simple wiring have been realized.

PRODUCT CONFIGURATION

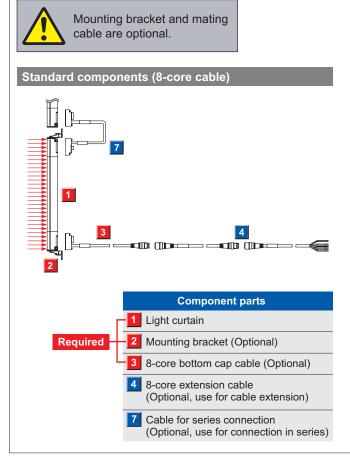

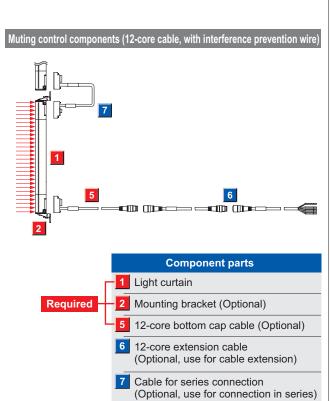

FIBER SENSORS

LASER SENSORS PHOTO-

MICRO PHOTO-

AREA SENSORS

CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIDE-SAVING

WIRE-SAVING

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

PREVENTION DEVICES

SF-CL1T264T

LASER MARKERS

PLC

MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Light Curtains Safety

Switch

Control
Units

Definition of Sensing Heights

SF4B-C SF4C

SF2C

SF4B SF2B

LASER SENSORS

PHOTO-ELECTRIC SENSORS AREA SENSORS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN

FA COMPONENTS MACHINE VISION SYSTEMS

CURING SYSTEMS

Definition of Sensing Heights

SF4B-C SF4C


SF2C SF4B SF2B BSF4-AH80

ORDER GUIDE

1 Light curtains | Mounting bracket and bottom cap cable are not supplied with the light curtain. Be sure to order them separately.

		Curtains Wounting Dracket a	Operating		odel No. (Note 2		Number	T.	eight (mm in)	
Т	уре	Appearance	range (Note 1)		SFB-HC non-compatible	Korean Press compliant (SFB-HC non-ompatible)	of beam channels		China Press compliant (GB4584)(Note 3)	
				SF4B-F23 <v2></v2>	SF4B-F23-01 <v2></v2>	SF4B-F23-03 <v2></v2>	23	230 9.055	220 8.661	
	Beam of the protection type with the sensing object and the sensing		SF4B-F31 <v2></v2>	SF4B-F31-01 <v2></v2>	SF4B-F31-03 <v2></v2>	31	310 12.205	300 11.811		
			SF4B-F39 <v2></v2>	SF4B-F39-01 <v2></v2>	SF4B-F39-03 <v2></v2>	39	390 15.354	380 14.960		
type	nm (ch)	<u> </u>		SF4B-F47 <v2></v2>	SF4B-F47-01 <v2></v2>	SF4B-F47-03 <v2></v2>	47	470 18.504	460 18.110	
tion	14 r light	Protective height		SF4B-F55 <v2></v2>	SF4B-F55-01 <v2></v2>	SF4B-F55-03 <v2></v2>	55	550 21.654	540 21.260	
Finger protection type	sct ø bear			SF4B-F63 <v2></v2>	SF4B-F63-01 <v2></v2>	SF4B-F63-03 <v2></v2>	63	630 24.803	620 24.409	
r pro	obje		0.3 to 7 m	SF4B-F71 <v2></v2>	SF4B-F71-01 <v2></v2>	SF4B-F71-03 <v2></v2>	71	710 27.953	700 27.559	
inge	sing	3 7	0.984 to 22.966 ft	SF4B-F79 <v2></v2>	SF4B-F79-01 <v2></v2>	SF4B-F79-03 <v2></v2>	79	790 31.102	780 30.708	
ш	sen:			SF4B-F95 <v2></v2>	SF4B-F95-01 <v2></v2>	SF4B-F95-03 <v2></v2>	95	950 37.402	940 37.007	
	Min. (10 n	Beam pitch 5 mm 10 mm 0.197 in		SF4B-F111 <v2></v2>	SF4B-F111-01 <v2></v2>	SF4B-F111-03 <v2></v2>	111	1,110 43.701	1,100 43.306	
	20	0.394 in		SF4B-F127 <v2></v2>	SF4B-F127-01 <v2></v2>	SF4B-F127-03 <v2></v2>	127	1,270 50.000	1,260 49.606	
				SF4B-H12 <v2></v2>	SF4B-H12-01 <v2></v2>	SF4B-H12-03 <v2></v2>	12	230 9.055	220 8.661	
				SF4B-H16 <v2></v2>	SF4B-H16-01 <v2></v2>	SF4B-H16-03 <v2></v2>	16	310 12.205	300 11.811	
	_	.		SF4B-H20 <v2></v2>	SF4B-H20-01 <v2></v2>	SF4B-H20-03 <v2></v2>	20	390 15.354	380 14.960	
	84 ir	Beam 5 mm		SF4B-H24 <v2></v2>	SF4B-H24-01 <v2></v2>	SF4B-H24-03 <v2></v2>	24	470 18.504	460 18.110	
	90.0	channel 0.197 in		SF4B-H28 <v2></v2>	SF4B-H28-01 <v2></v2>	SF4B-H28-03 <v2></v2>	28	550 21.654	540 21.260	
ype	다(당	No		SF4B-H32 <v2></v2>	SF4B-H32-01 <v2></v2>	SF4B-H32-03 <v2></v2>	32	630 24.803	620 24.409	
on t	25 n n pit	Protective height	0.3 to 9 m	SF4B-H36 <v2></v2>	SF4B-H36-01 <v2></v2>	SF4B-H36-03 <v2></v2>	36	710 27.953	700 27.559	
tect	Win. Sensing object 25 mm 0.197 in head protection height 28. mm 0.197 in head protective height 29. mm 0.287 in head protection height 29. mm 0.197 in 0.787 in head protective height 20 mm 0.197 in 0.787 in 0.	0.984 to 29.528 ft	SF4B-H40 <v2></v2>	SF4B-H40-01 <v2></v2>	SF4B-H40-03 <v2></v2>	40	790 31.102	780 30.708		
Hand protection type	obje			SF4B-H48 <v2></v2>	SF4B-H48-01 <v2></v2>	SF4B-H48-03 <v2></v2>	48	950 37.402	940 37.007	
and	sing 78	1 3 1		SF4B-H56 <v2></v2>	SF4B-H56-01 <v2></v2>	SF4B-H56-03 <v2></v2>	56	1,110 43.701	1,100 43.306	
_	sens			SF4B-H64 <v2></v2>	SF4B-H64-01 <v2></v2>	SF4B-H64-03 <v2></v2>	64	1,270 50.000	1,260 49.606	
	Min. 20 n	Beam pitch 5 mm 20 mm 0.197 in		SF4B-H72 <v2></v2>	SF4B-H72-01 <v2></v2>	SF4B-H72-03 <v2></v2>	72	1,430 56.299	1,420 55.905	
	20		0.787 in		SF4B-H80 <v2></v2>	SF4B-H80-01 <v2></v2>	SF4B-H80-03 <v2></v2>	80	1,590 62.598	1,580 62.205
				SF4B-H88 <v2></v2>	SF4B-H88-01 <v2></v2>	SF4B-H88-03 <v2></v2>	88	1,750 68.898	1,740 68.503	
			0.3 to 7 m 0.984 to 22.966 ft	SF4B-H96 <v2></v2>	SF4B-H96-01 <v2></v2>	SF4B-H96-03 <v2></v2>	96	1,910 75.197	1,900 74.803	
				SF4B-A6 <v2></v2>	SF4B-A6-01 <v2></v2>	_	6	230 9.055	200 7.874	
				SF4B-A8 <v2></v2>	SF4B-A8-01 <v2></v2>	_	8	310 12.205	280 11.024	
				SF4B-A10 <v2></v2>	SF4B-A10-01 <v2></v2>	_	10	390 15.354	360 14.173	
	72 in			SF4B-A12 <v2></v2>	SF4B-A12-01 <v2></v2>	_	12	470 18.504	440 17.323	
90	ø1.772	Beam 15 mm 0.591 in		SF4B-A14 <v2></v2>	SF4B-A14-01 <v2></v2>	_	14	550 21.654	520 20.472	
n type	ch)			SF4B-A16 <v2></v2>	SF4B-A16-01 <v2></v2>	_	16	630 24.803		
Arm / Foot protection	g object ø45 mm ø75 in beam pitch)		0.3 to 9 m	SF4B-A18 <v2></v2>	SF4B-A18-01 <v2></v2>	_	18	710 27.953	680 26.772	
rote	ct ø	Protective height	0.984 to 29.528 ft	SF4B-A20 <v2></v2>	SF4B-A20-01 <v2></v2>	_	20	790 31.102	760 29.921	
oot p	obje	Beam pitch		SF4B-A24 <v2></v2>	SF4B-A24-01 <v2></v2>	_	24	950 37.402	920 36.220	
) / Fc	sing .578	2 40 mm 1.575 in		SF4B-A28 <v2></v2>	SF4B-A28-01 <v2></v2>	_	28	1,110 43.701		
Arm	Min. sensing c (40 mm 1.575			SF4B-A32 <v2></v2>	SF4B-A32-01 <v2></v2>	_	32		1,240 48.819	
	Ain. 40 m	15 mm		SF4B-A36 <v2></v2>	SF4B-A36-01 <v2></v2>	_	36	1,430 56.299		
	20	0.591 in		SF4B-A40 <v2></v2>	SF4B-A40-01 <v2></v2>	_	40	1,590 62.598		
				SF4B-A44 <v2></v2>	SF4B-A44-01 <v2></v2>	_	44	-	1,720 67.716	
			0.3 to 7 m 0.984 to 22.966 ft		SF4B-A48-01 <v2></v2>	_	48		1,880 74.016	
Nete	-: 4\ Th	e operating range is the possible set				aurtain ann dataa				

Notes: 1) The operating range is the possible setting distance between the emitter and the receiver. The light curtain can detect an object less than 0.3 m 0.984 ft away.

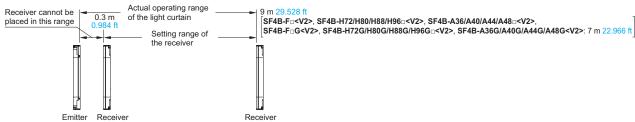

- 2) The model No. with "E" on the product label is the emitter, "D" on the label is the receiver. 3) Not conforming to Korean Press (SF4B-□-03<V2>)

ORDER GUIDE

1 Light curtains (Robust type) Mounting bracket and bottom cap cable are not supplied with the light curtain. Be sure to order them separately. Number Model No. Protective height (mm in) Operating range Appearance Type SFB-HC beam China Press compliant (GB4584) non-compatible channels SF4B-F23G<V2> 9.606 244 23 220 8.661 SF4B-F31G<V2> 324 12.756 300 11.811 31 11.8 mm SF4B-F39G<V2> 404 15.906 380 14.960 Ream 39 sensing object ø14 mm ø0.551 nm 0.394 in beam pitch) channel No. Finger protection type SF4B-F47G<V2> 484 19.055 460 18.110 47 SF4B-F55G<V2> 564 22.205 55 540 21.260 Protective height 644 25.354 SF4B-F63G<V2> 63 620 24.409 _ 0.3 to 7 m SF4B-F71G<V2> 0.984 to 22.966 ft 71 724 28.504 700 27.559 SF4B-F79G<V2> 79 804 31.654 780 30.708 Ţ, SF4B-F95G<V2> 95 964 37.953 940 37.007 mm Beam pitch 11.8 mm 10 mm 0.465 in SF4B-F111G<V2> 1,100 43.306 111 1,124 44.252 **€** 6 SF4B-F127G<V2> 1,284 50.551 1,260 49.606 127 SF4B-H12G<V2> SF4B-H12G-01<V2> 12 244 9.606 220 8.661 SF4B-H16G<V2> SF4B-H16G-01<V2> 324 12.756 300 11.811 SF4B-H20G<V2> SF4B-H20G-01<V2> 404 15.906 20 380 14.960 SF4B-H24G<V2> SF4B-H24G-01<V2> 24 484 19.055 460 18.110 11.8 mm SF4B-H28G<V2> SF4B-H28G-01<V2> 28 564 22.205 540 21.260 Beam mm ø0.984 channel No. SF4B-H32G<V2> SF4B-H32G-01<V2> 32 644 25.354 620 24.409 Hand protection type 0.3 to 9 m beam pitch) SF4B-H36G<V2> SF4B-H36G-01<V2> 36 724 28.504 700 27.559 0.984 to 29.529 ft Protective height sensing object ø25 SF4B-H40G<V2> SF4B-H40G-01<V2> 804 31.654 40 780 30.708 SF4B-H48G<V2> SF4B-H48G-01<V2> 964 37.953 48 940 37.007 SF4B-H56G<V2> SF4B-H56G-01<V2> 1,124 44.252 ĺ٧, 56 1,100 43.306 47 SF4B-H64G<V2> SF4B-H64G-01<V2> 64 1,284 50.551 1,260 49.606 Beam pitch 11.8 mm 20 mm 0.465 in 0.787 in E SF4B-H72G<V2> SF4B-H72G-01<V2> 1.444 56.850 1.420 55.905 72 Min 20 SF4B-H80G<V2> SF4R-H80G-01<V2> 1.604 63.150 1,580 62.205 80 SF4B-H88G<V2> SF4B-H88G-01<V2> 1,764 69.449 1,740 68.503 88 0.3 to 7 m 0.984 to 22.966 ft SF4B-H96G<V2> SF4B-H96G-01<V2> 1,924 75.748 96 1,900 74.803 SF4B-A6G<V2> 6 244 9.606 200 7.874 SF4B-A8G<V2> 8 324 12.756 280 11.024 SF4B-A10G<V2> _ 10 404 15.906 360 14.173 SF4B-A12G<V2> 12 484 19.055 440 17.323 sensing object ø45 mm ø1.772 in mm 1.575 in beam pitch) SF4B-A14G<V2> 564 22.205 14 520 20.472 Beam channel No. 21.8 mm Arm / Foot protection type SF4B-A16G<V2> 644 25.354 16 600 23.622 0.3 to 9 m SF4B-A18G<V2> 724 28.504 18 680 26.772 0.984 to 29.529 ft Protective height SF4B-A20G<V2> 804 31.654 20 760 29.921 Beam pitch 40 mm 1.575 in SF4B-A24G<V2> 24 964 37.953 920 36.220 SF4B-A28G<V2> 1,124 44.252 28 1,080 42.520 **(1)** SF4B-A32G<V2> 1,284 50.551 1,240 48.819 32 mm 21.8 mm SF4B-A36G<V2> 36 1,444 56.850 1.400 55.118 M 6 SF4B-A40G<V2> 1,604 63.150 40 1,560 61.417 SF4B-A44G<V2> 1.764 69.449 44 1.720 67.716 0.3 to 7 m 0.984 to 22.966 ft SF4B-A48G<V2> 48 1,924 75.748 1,880 74.016

Differences from standard type

The robust type SF4B-GC<V2> is different from the standard type SF4B-CV2> in the following ways:

- Sensing width (protective height) Profile Net weight Mounting bracket Front protection cover
- Laser alignment tool
 Noncompliant with Japanese and Korean press standard
- Noncompliant with Korean regulations

Other specifications, input/output circuits, and options are the same as for the standard type.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

UGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION

LASER MARKERS

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch

SF4B-C SF4C SF2C SF4B SF2B

LASER SENSORS

PHOTO:

AREA SENSORS

PRESSURE SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE MENT

STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC

HUMAN

MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS MACHINE VISION SYSTEMS

CURING SYSTEMS

Light Safety Optical Touch Switch Control Definition of Sensing Heights

SF4B-C SF4C SF2C

SF2B BSF4-AH80

ORDER GUIDE

2 Mounting brackets | Mounting bracket is not supplied with the light curtain. Be sure to order it separately.

Designation		Model No.	Description
	M8 rear mounting bracket	MS-SFB-7-T	For rear mounting. Allows the light curtain to be mounted at the rear with one M8 hexagon-socket-head bolt. (4 pcs. per set for emitter and receiver)
Rear / side mounting bracket [Material: Cold rolled]	M8 side mounting bracket	MS-SFB-8-T	For side mounting. Allows the light curtain to be mounted at the side with one M8 hexagon-socket-head bolt. (4 pcs. per set for emitter and receiver)
carbon steel (SPCC)	M8 rear / side mounting bracket set	MS-SFB-1-T2	Can be used as either a rear mounting bracket MS-SFB-7-T or a side mounting bracket MS-SFB-8-T depending on mounting direction. (4 pcs. per set for emitter and receiver)
	Standard mounting bracket	MS-SFB-1	Used to mount the light curtain on the rear surface and side surface. (4 pcs. per set for emitter and receiver)
360° mounting	M8 mounting bracket	MS-SFB-1-T	Allows the light curtain to be mounted at the rear and side with one M8 hexagon- socket-head bolt. (4 pcs. per set for emitter and receiver)
bracket (Material: Die-cast zinc alloy)	Pitch adapter bracket	MS-SFB-4	Used as the mounting bracket when changing over a previous light curtain with a protective height of 200 mm 7.874 in or more to the SF4B series. It is installed using two M5 hexagon-socket-head bolts. (4 pcs. per set for emitter and receiver)
* Light curtain can revolve 360° horizontally.	M8 pitch adapter bracket	MS-SFB-4-T	Used as the mounting bracket when changing over a previous light curtain with a protective height of 200 mm 7.874 in or more to the SF4B series. It is installed using one M8 hexagon-socket-head bolt. (4 pcs. per set for emitter and receiver)
Dead zoneless moun (Material: Die-cast zin		MS-SFB-3	Mounting with no dead zone is possible so that the mounting bracket does not project past the protective height. (4 pcs. per set for emitter and receiver)
Standard L mounting bracket (For SF4B -□ G □) [Material: Cold rolled carbon steel (SPCC)] (Trivalent chrome plated)		MS-SF4BG-1	Mounting is possible behind or at the side of the light curtain. Mount with two M5 bolts or one M8 bolt. (4 pcs. per set for emitter and receiver)
Dead zoneless mounting bracket (For SF4B -□ G □) [Material: Mounting bracketCold rolled carbon steel (SPCC) (Trivalent chrome plated) Supporting bracketPPS		MS-SF4BG-3	Allows light curtains to be installed closely together or in locations with installation restrictions due to equipment columns or jigs. (4 pcs. per set for emitter and receiver)

M8 rear mounting bracket

• MS-SFB-7-T • MS-SFB-1-T2 (Rear mounting)

M8 rear mounting bracket MS-SFB-7-T

MS-SFB-1-T2 (Rear mounting) M5 (length: 18mm 0.709 in) hexagon-socket-head bolt Accessory for MS-SFB-7-T MS-SFR-1-T2 Light Sensing surface

Four bracket set Four M5 (length: 18 mm 0.709 in) hexagon-socket-head bolts are

M8 pitch adapter bracket Dead zoneless mounting bracket • MS-SFB-4-T • MS-SFB-3

M8 pitch adapter bracket MS-SFB-4-T M5 (length: 18 mm 0.709 in) hexagon-socket-head bolt (Accessory for MS-SFB-4-T) Light curtain Sensing surface

Four bracket set Four M5 (length: 18 mm 0.709 in) hexagon-socket-head bolts are attached.

M8 side mounting bracket

• MS-SFB-8-T • MS-SFB-1-T2 (Side mounting)

M8 side mounting bracket MS-SFB-8-T MS-SFB-1-T2 (Side mounting M5 (length: 18mm 0.709 hexagon-socket-head bolt Accessory for MS-SFB-8-T MS-SFB-1-T2 Light Sensing

Four bracket set Four M5 (length: 18 mm 0.709 in) hexagon-socket-head bolts are attached

• MS-SFB-1


M8 mounting hole (for center mounting)

Standard mounting bracket MS-SFB-1 M5 (length: 18 mm 0.709 in) hexagon-socket-head bolt M5 mounting hole (Accessory for MS-SFB-1) 0 Sensing Light surface curtain

Four bracket set Four M5 (length: 18 mm 0.709 in) hexagon-socket-head bolts are attached.

Standard L mounting bracket (For SF4B-□G□)


MS-SF4BG-1

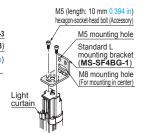

Four bracket set Eight M5 (length: 10 mm 0.394 in) hexagon-socket-head bolts are attached.

Standard mounting bracket M8 mounting bracket Pitch adapter bracket

• MS-SFB-1-T • MS-SFB-4

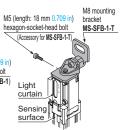

Four bracket set Four M5 (length: 18 mm 0.709 in) hexagon-socket-head bolts are

MS-SFB-4 M5 (length: 18 mm 0.709 i hexagon-socket-head bolt (Accessory for MS-SFB-4) Light curtain Sensina surface

Pitch adapter


Four bracket set Four M5 (length: 18 mm 0.709 in) hexagon-socket-head bolts are attached.

Dead zoneless mounting bracket (For SF4B-GG)

MS-SF4BG-3

When using M5 hexagonsocket-head bolt (Rear mounting)

When using M8 hexagon bolt (Rear mounting)

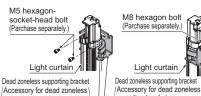

Accessory for dead zoneless mounting bracket


Dead zoneless mounting bracket MS-SF4BG-3

mounting bracket Dead zoneless mounting bracket MS-SF4BG-3

Light curtain

Four bracket set

Twelve M5 (length: 8 mm 0.315 in) hexagon-socket-head bolts and four nut slots are attached.

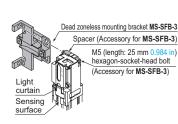

Four bracket set

Four M5 (length: 25 mm 0.984 in)

hexagon-socket-head bolts and

four spacers are attached.

ORDER GUIDE

Bottom cap cable		Appearance					
ap cable			Model No.	Description			
	Discrete wire		SFB-CCB7 SFB-CCB10	Length: 3 m 9.843 ft Net weight: 370 g approx. (2 cables) Length: 7 m 22.966 ft Net weight: 820 g approx. (2 cables) Length: 10 m 32.808 ft Net weight: 1,160 g approx. (2 cables)	Used for connecting to the light curtain and to other cables or the SF-C13 control unit. Two cables per set for emitter and receiver		
3 Bottom o	ctor		SFB-CCB15 SFB-CB05	Length: 15 m 49.213 ft Net weight: 1,710 g approx. (2 cables) Length: 0.5 m 1.640 ft Net weight: 95 g approx. (2 cables) Length: 5 m 16.404 ft	Used for connecting to the light curtain and to an extension cable or the SF-C11 control unit.		
	Connector		SFB-CB5 SFB-CB10	Net weight: 620 g approx. (2 cables) Length: 10 m 32.808 ft Net weight: 1,200 g approx. (2 cables)	Two cables per set for emitter and receiver Connector outer diameter: ø14 mm ø0.551 in max.		
cable			SFB-CC3 SFB-CC10	Net weight: 380 g approx. (2 cables) Length: 10 m 32.808 ft Net weight: 1,200 g approx. (2 cables)	Used for cable extension or connecting to the SF-C13 contro unit. Two cables per set for emitter and receiver Connector outer diameter: ø14 mm ø0.551 in max.		
Minectors on both ends with connector connector on one end connector on one end connector ceiver For emitter on one end			SFB-CCJ3E SFB-CCJ10E SFB-CCJ3D	Net weight: 190 g approx. (1 cable) Length: 10 m 32.808 ft Net weight: 580 g approx. (1 cable) Length: 3 m 9.843 ft Net weight: 210 g approx. (1 cable)	Used for cable extension or connecting to the SF-C11 and the SF-C14EX control unit. One each for emitter and receiver Connector color: Gray (for emitter), Black (for receiver) Connector outer diameter: ø14 mm ø0.551 in max.		
ole			SFB-CCJ10D	Length: 10 m 32.808 ft Net weight: 600 g approx. (1 cable) Length: 3 m 9.843 ft			
cap cak	Discrete wire		SFB-CCB3-MU	Net weight: 420 g approx. (2 cables) Length: 7 m 22.966 ft Net weight: 930 g approx. (2 cables)	Used for connecting to the light curtain and to other cables of the SF-C13 control unit. Two cables per set for emitter and receiver		
5 Bottom	Connector		SFB-CB05-MU	Length: 0.5 m 1.640 ft Net weight: 110 g approx. (2 cables)	Used for connecting to the light curtain and to an extension cable or the SF-C12 control unit. Two cables per set for emitter and receiver Connector outer diameter: ø16 mm ø0.630 in max.		
	nnector end				SFB-CC3-MU	Length: 3 m 9.843 ft Net weight: 430 g approx. (2 cables) Length: 7 m 22.966 ft	Used for connecting to an extension cable or the SF-C13 control unit.
on cable		\[\ \]\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	SFB-CC10-MU	Net weight: 1,000 g approx. (2 cables) Length: 10 m 32.808 ft Net weight: 1,300 g approx. (2 cables)	Two cables per set for emitter and receiver Connector outer diameter: ø16 mm ø0.630 in max.		
Extensi	n both ends or emitter		SFB-CCJ3E-MU	Net weight: 190 g approx. (1 cable) Length: 10 m 32.808 ft	Used for connecting to an extension cable or the SF-C12 control unit.		
9	· ν		SFB-CCJ3D-MU	Length: 3 m 9.843 ft Net weight: 210 g approx. (1 cable) Length: 10 m 32.808 ft	One each for emitter and receiver Connector outer diameter: ø16 mm ø0.630 in max. Connector color: Gray (for emitter), Black (for receiver)		
eries			SFB-CSL01	Length: 0.1 m 0.328 ft Net weight: 45 g approx. (2 cables)			
ble for s	nection		SFB-CSL05	Length: 0.5 m 1.640 ft Net weight: 95 g approx. (2 cables) Length: 1 m 3.281 ft	Used to connect light curtains in series Two cables per set for emitter and receiver (common for emitter and receiver)		
Cat con		SFB-CSL1	Net weight: 150 g approx. (2 cables) Length: 5 m 16.404 ft	Cable color: Gray (common for emitter and receiver)			
Exclusive mating cable for SF-C14EX		□ Th	SFB-CB05-EX	Length: 0.5 m 1.640 ft Net weight: 95 g approx. (2 cables)	Used for connecting to the light curtain and to SF-C14EX control unit or 8-core extension cable with connectors on		
			SFB-CB5-EX	Net weight: 620 g approx. (2 cables) Length: 10 m 32.808 ft	both ends Two cables per set for emitter and receiver Connector outer diameter: ø14 mm ø0.551 in max.		
For	SF4-AH _□		SFB-CB05-A-P	Net weight: 1,200 g approx. (2 cables)	Used to allow connector cables connected to previous light curtains (at the control circuit side) to be smoothly adapted to		
For S (NF	F4-AH□-N PN type)	_	SFB-CB05-A-N	Length: 0.5 m 1.640 ft Net weight:	the SF4B series. Also, SFB-CB05-A-P and SFB-CB05-A-N are usable even		
(PN	IP type)		SFB-CB05-B-P	110 g approx. (2 cables)	when external device input is not used as the polarity of PNP output or NPN output is fixed. Two cables per set for emitter and receiver		
	집 집 집 집 집 mating 7 Cable for series 6 Extension cable 5 Bottom cap cable	7 Cable for series 6 Extension cable 5 Bottom cap cable 4 Extension cable 1 Extension cable 2 Extension cable 4 Extension cable 2 Extension cable 2 Extension cable 3	Cable for series Mith connection With connection With connectors on both ends Cable for series Ca	SFB-CC3 SFB-CC10 SFB-CCJ3E SFB-CCJ3E SFB-CCJ10E SFB-CCJ10E SFB-CCJ10E SFB-CCJ10D SFB-CCJ3D SFB-CCJ10D SFB-CCJ3D SFB-CCJ3D SFB-CSL01 SFB-CSL01 SFB-CSL01 SFB-CSL05 SFB-CSL05 SFB-CSL05 SFB-CB05-EX SFB-CB05-EX SFB-CB05-A-P SFB-CB05-A-N SFB-CB05-B-P SFB-CB05-B-P SFB-CB05-B-P	SFB-CB10		

Note: Where the cable color has not been specified, it is black for emitter, gray with black line for outer diameter is ø6 mm ø0.236 in, min. bending radius is R6 mm R0.236 in

For details of mating cable of CC-Link Safety system remote I/O unit with connectors for light curtain SF-CL1T264T, refer to website.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

> GHT URTAINS / AFETY OMPONENTS RESSURE /

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

> RING STEMS

Selection Guide

Light Curtains Safety Components Optical Touch Switch

Control Units

Definition of Sensing Heights

SF4B-C SF4C

SF2C SF4B

SF4B SF2B

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVIOUS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

COMPONENTS FA

CURING SYSTEMS

VISION SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units

SF4B-C SF4C SF2C SF4B

SF2B BSF4-AH80

ORDER GUIDE

Spare parts (Accessories for light curtain)


Designation	Model No.	Description
Intermediate supporting bracket (Excluding SF4B-□G□) (Note 1)	MS-SFB-2	Used to mount the light curtain on the intermediate position. (2 pcs. per set for emitter and receiver) Mounting is possible behind or at the side of the light curtain.
Intermediate supporting bracket (Note 2) (For SF4B-□G□)	MS-SF4BG-2	Used to mount the light curtain in the intermediate position. (2 pcs. per set for emitter and receiver) Mounting is possible behind or at the side of the light curtain.
Test rod ø14	SF4B-TR14	Min. sensing object for regular checking (ø14 mm ø0.551 in), with finger protection type (min. sensing object ø14 mm ø0.551 in)
Test rod ø25	SF4B-TR25	Min. sensing object for regular checking (ø25 mm ø0.984 in), with hand protection type (min. sensing object ø25 mm ø0.984 in)

Notes: 1) The number of sets required varies depending on the product.

s. 1) 111 0	number of sets required varies depe	riding on the product.
1 se	t: SF4B-F= <v2></v2>	Light curtain with 79 to 111 beam channels
	SF4B-H□ <v2></v2>	Light curtain with 40 to 56 beam channels
	SF4B-A□ <v2></v2>	Light curtain with 20 to 28 beam channels
2 se	ts: SF4B-F127□ <v2></v2>	
	SF4B-H□ <v2></v2>	Light curtain with 64 to 80 beam channels
	SF4B-A□ <v2></v2>	Light curtain with 32 to 40 beam channels
3 se	ts: SF4B-H = < V2 >	Light curtain with 88 to 96 beam channels
	SF4B-A□ <v2></v2>	Light curtain with 44 to 48 beam channels
2) The	number of sets required varies depe	ending on the product.
1 se	t: SF4B-F□G <v2></v2>	Light curtain with 79 to 127 beam channels
	SF4B-H□G□ <v2></v2>	Light curtain with 40 to 64 beam channels
	SF4B-A□G <v2></v2>	Light curtain with 20 to 32 beam channels
2 se	t: SF4B-HaGa <v2></v2>	Light curtain with 72 to 96 beam channels
	SF4B-A□G <v2></v2>	Light curtain with 36 to 48 beam channels

Intermediate supporting bracket

· MS-SFB-2

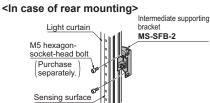

Sensing surface

In case of side mounting

M5 hexagonsocket-head bolt


(Purchase separately)

Light curtain

Sensing surface

· MS-SF4BG-2



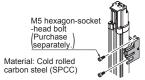

<In case of side mounting>



OPTIONS

Exclusive control units

Designation	Appearance	Model No.	Application cable	Description
Connector connection type control unit		SF-C11	Bottom cap cable: SFB-CB Extension cable: SFB-CCJ10	Use 8-core cable with connector to connect to the light curtain. Compatible with up to Control Category 4. Interference prevention wires and muting function cannot be used.
Robust type control unit		SF-C12	Bottom cap cable: SFB-CB05-MU Extension cable: SFB-CCJ10□-MU	Use 12-core cable with connector to connect to the light curtain. Compatible with up to Control Category 4. Muting function cannot be used. Interference prevention wires can be used.
Slim type control unit		SF-C13	Bottom cap cable: SFB-CCB _□ (-MU) Extension cable: SFB-CC _□ (-MU)	Use a discrete wire cable to connect to the light curtain. Compatible with up to Control Category 4. Interference prevention wires and muting function can be used.
Application expansion unit for SF4B series		SF-C14EX	Bottom cap cable:	The muting control function and emergency stop input expand the applications of the light curtains. Use exclusive cable to connect to the light curtain.
Handy-controller non-compatible type		SF-C14EX-01	Extension cable: SFB-CCJ10□	Compatible with up to Control Category 4. The handy-controller SFB-HC cannot be used with SF-C14EX-01 .
CC-Link Safety system remote I/O unit for light curtain (Note)		SF-CL1T264T	Bottom cap cable: SFB-CB _□ -CL Extension cable: SFB-CCJ10 _□ -CL	This is a remote I/O unit that allows the safety field network "CC-Link Safety" to be connected to the light curtains or the safety components. Use exclusive cable to connect to the light curtain. Compatible with up to Control Category 4. Please contact our office for details.

Note: Refer to our website for details of the remote I/O unit SF-CL1T264T.

SF-C12 spare relay set

OPTIONS

Recommended safety relay




Note: Contact Panasonic Corporation for details on the recommended products.

Туре	With LED indicator			
Model No.	SFS3-L-DC24V	SFS4-L-DC24V		
Item Part No.	AG1S132	AG1S142		
Contact arrangement	3a1b	4a2b		
Rated nominal switching capacity	6 A / 250 V AC, 6 A / 30 V DC			
Min. switching capacity	1 mA / 5 V DC			
Coil rating	15 mA / 24 V DC	20.8 mA / 24 V DC		
Rated power consumption	360 mW	500 mW		
Operation time	20 ms or less			
Release time	20 ms or less			
Ambient temperature	-40 to +85 °C -40 to +185 °F (Humidity: 5 to 85 % RH)			
Applicable standards	UL, C-UL, TÜV, Korea's S-mark			


Handy-controller

Designation	Appearance	Model No.
Handy- controller (Note)	* Includes 2 adapter cables	SFB-HC (Note)
Cable set for cable type connection		SFC-WNC1 (Note)

Note: A handy-controller cannot be used with the SF4B-□-01<V2>, the SF4B-□-03<V2> and the SF-C14EX-01.

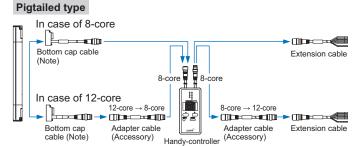

Note: If using a bottom cap cable with discrete wire, please order the SFB-CC3/CC10 separately. Refer to the instruction manual for the light curtain for details on wiring.

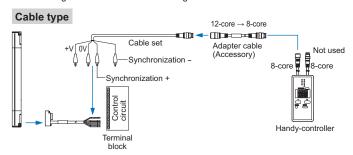


Y-shaped connector

Туре	Appearance	Model No.		Description
Wire-saving Y-shaped connector		SFB-WY1 (Note)	and receiver are consolidated in Wiring has +24 V, 0 V, OSSD 1,	OSSD 2, output polarity setting wire (shield). n wire are connected inside the connector.
Cable with		WY1-CCN3 (Note)	Cable length: 3 m 9.843 ft Net weight: 200 g approx. (1 cable)	Mating cable for Y-shaped connector Cable color: Gray (with black line)
connector on one side		WY1-CCN10 (Note)	Cable length: 10 m 32.808 ft Net weight: 620 g approx. (1 cable)	Connector color: Black The min. bending radius: R6 mm R0.236 in

Note: Not available for SF4B---01<V2>.

By using the Y-shaped connector, the least required wires such as power or safety output are consolidated into one cable. Man-hours taken for wiring is eliminated to the minimum. Construction times as well as wiring mistakes are greatly reduced.

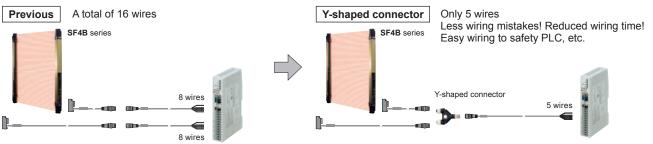

Safety PLC / remote I/O Safety relay unit **SF-C13**

Safety PLC / remote I/O Safety relay unit **SF-C13**

FIBER SENSORS

LASER SENSORS PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR

USE SENSORS SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-

MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS MACHINE

VISION SYSTEMS

Safety Compone

Control Units

SF4B-C SF4C

SF2C

SF4B SF2B

BSF4-AH80

Refer to the operation manual SF4B <V2> for more detail such as installation of Y-shaped connector, terminal wiring, and wiring example.

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

CURTAINS/ SAFETY COMPONENTS PRESSURE/ FLOW SENSORS

AREA SENSORS

PARTICULAR USE SENSORS

SENSORS

SENSORS

SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

COMPONENTS MACHINE

VISION SYSTEMS UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch


SF4B-C SF4C SF2C

Sensing Height

SF4B SF2B BSF4-AH80

OPTIONS

Product configuration

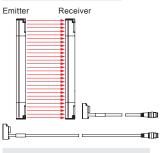

Bottom cap cable (2 cables for emitter and receiver) SFB-CB05 (0.5 m 1.64 ft)

SFB-CB05 (0.5 m 1.64 ft) SFB-CB5 (5 m 16.404 ft) SFB-CB10 (10 m 32.808 ft) Extension cable (1 cable for receiver)

SFB-CCJ3D (3 m 9.843 ft) SFB-CCJ10D (10 m 32.808 ft)

Extension cable (1 cable for emitter)

SFB-CCJ3E (3 m 9.843 ft) SFB-CCJ10E (10 m 32.808 ft)

Y-shaped connector SFB-WY1

Extension cable


SFB-CCJ3D (3 m 9.843 ft) SFB-CCJ10D (10 m 32.808 ft)

Cable with connector on one side (Common for all models)

WY1-CCN3 (3 m 9.843 ft) WY1-CCN10 (10 m 32.808 ft)

Connector pin No.	Description
1	OSSD 2
2	+24 V
3	OSSD 1
4	Not used
(5)	Not used
6	Not used
7	0 V
8	Output polarity setting wire (Shield)


Connector pin layout

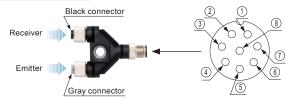

Wiring diagram of control unit SF-C13

<For PNP output (minus ground)>

• Connect the light curtain control outputs OSSD 1 and OSSD 2 to S1 and S2 respectively.

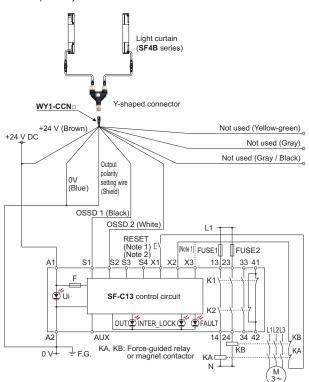


Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.

- 2) Use a momentary-type switch as the reset (RESET) button.
- 3) Unused wires must be insulated.

<For NPN output (plus ground)>

• Connect the light curtain control outputs OSSD 1 and OSSD 2 to S4 and S2 respectively and ground the + side.

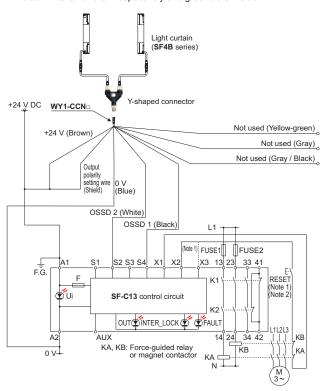

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3.

In this case, a reset (RESET) button is not needed.

- 2) Use a momentary-type switch as the reset (RESET) button.
- 3) Unused wires must be insulated.

OPTIONS

Front protection cover (except for SF4B-□G□) / Protection bar set (except for SF4B-□G□) / Corner mirror

Applicable Designation beam axes		Front protection cover	Protection bar set Rear / side protection bar set		Corner mirror			
Finger	Hand	Arm / Foot	Model No.	Model No.	Model No.	Model No.	Effective reflective surface	
23	12	6	FC-SFBH-12	MC-SFBH-12	MC-SFBH-12-T	RF-SFBH-12	236 × 72 mm 9.291 × 2.835 in	
31	16	8	FC-SFBH-16	MC-SFBH-16	MC-SFBH-16-T	RF-SFBH-16	316 × 72 mm 12.441 × 2.835 in	
39	20	10	FC-SFBH-20	MC-SFBH-20	MC-SFBH-20-T	RF-SFBH-20	396 × 72 mm 15.591 × 2.835 in	
47	24	12	FC-SFBH-24	MC-SFBH-24	MC-SFBH-24-T	RF-SFBH-24	476 × 72 mm 18.740 × 2.835 in	
55	28	14	FC-SFBH-28	MC-SFBH-28	MC-SFBH-28-T	RF-SFBH-28	556 × 72 mm 21.890 × 2.835 in	
63	32	16	FC-SFBH-32	MC-SFBH-32	MC-SFBH-32-T	RF-SFBH-32	636 × 72 mm 25.039 × 2.835 in	
71	36	18	FC-SFBH-36	MC-SFBH-36	MC-SFBH-36-T	RF-SFBH-36	716 × 72 mm 28.189 × 2.835 in	
79	40	20	FC-SFBH-40	MC-SFBH-40	MC-SFBH-40-T	RF-SFBH-40	796 × 72 mm 31.339 × 2.835 in	
95	48	24	FC-SFBH-48	MC-SFBH-48	MC-SFBH-48-T	RF-SFBH-48	956 × 72 mm 37.638 × 2.835 in	
111	56	28	FC-SFBH-56	MC-SFBH-56	MC-SFBH-56-T	RF-SFBH-56	1,116 × 72 mm 43.937 × 2.835 in	
127	64	32	FC-SFBH-64	MC-SFBH-64	MC-SFBH-64-T	RF-SFBH-64	1,276 × 72 mm 50.236 × 2.835 in	
-	72	36	FC-SFBH-72	MC-SFBH-72	MC-SFBH-72-T	RF-SFBH-72	1,436 × 72 mm 56.535 × 2.835 in	
-	80	40	FC-SFBH-80	MC-SFBH-80	MC-SFBH-80-T	RF-SFBH-80	1,596 × 72 mm 62.835 × 2.835 in	
_	88	44	FC-SFBH-88	MC-SFBH-88	MC-SFBH-88-T	RF-SFBH-88	1,756 × 72 mm 69.134 × 2.835 in	
-	96	48	FC-SFBH-96	MC-SFBH-96	MC-SFBH-96-T	RF-SFBH-96	1,916 × 72 mm 75.433 × 2.835 in	

Note: The model Nos. given above denote a single unit, not a pair of units. 2 units are required for use in mounting to the emitter / receiver. (Except for corner mirror)


Front protection cover

• FC-SFBH-□

Protects sensing surface of the light curtain from flying objects such as welding spatter.

The operating range reduces when the front protection cover is used.

Note: Not available for SF4B-□G□.

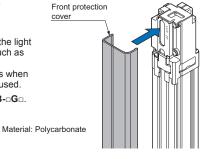

Sensing range

		3-H□	SF4B-A□			
SF4B-F□	12 to 64 beam axes type	72 to 96 beam axes type	6 to 32 beam axes type	36 to 48 beam axes type		
0.3 to 6 m	0.3 to 7.5 m	0.3 to 6 m	0.3 to 7.5 m	0.3 to 6 m		
0.984 to 19.685 ft	0.984 to 24.606 ft	0.984 to 19.685 ft	0.984 to 24.606 ft	0.984 to 19.685 ft		
0.3 to 6 m	0.3 to 7.5 m	0.3 to 6 m	0.3 to 7.5 m	0.3 to 6 m		
0.984 to 19.685 ft	0.984 to 24.606 ft	0.984 to 19.685 ft	0.984 to 24.606 ft	0.984 to 19.685 ft		
0.3 to 5.5 m	0.3 to 7 m	0.3 to 5.5 m	0.3 to 7 m	0.3 to 5.5 m		
0.984 to 18.045 ft	0.984 to 22.966 ft	0.984 to 18.045 ft	0.984 to 22.966 ft	0.984 to 18.045 ft		
0	0.3 to 6 m .984 to 19.685 ft 0.3 to 6 m .984 to 19.685 ft 0.3 to 5.5 m	20.3 to 6 m 0.3 to 7.5 m 984 to 19.856 m 0.3 to 7.5 m 984 to 19.856 m 0.3 to 7.5 m 984 to 19.856 m 0.3 to 7.5 m 984 to 19.855 m 0.984 to 24.606 ft 0.3 to 5.5 m 0.3 to 7 m	2 to 9 to 4 to 4 to 5 to 7 to 7 to 9 to 6 to 7 to 7 to 9 to 7 to 7 to 9 to 7 to 7	axes type axes		

Note: The operating range is the possible setting distance between the emitter and the

Corner mirror

• RF-SFBH-

Normally for L-shaped or U-shaped installation, 2 or 3 sets of light curtains are needed. With the use of a corner mirror reflecting the light, one set of light curtain is possible for L-shaped or U-shaped installation.






With 1 mirror	Declined to 90 %
With 2 mirrors	Declined to 80 %

Protection bar set Rear / side protection bar set

• MC-SFBH-□ • MC-SFBH-□-T

Note: Not available for Note: Not available for SF4B-□G□. SF4B-□G□. M5 hexagon-socket-head bolt <Rear mounting> <Side mounting> M5 hexagon-socket-head bolt with washers

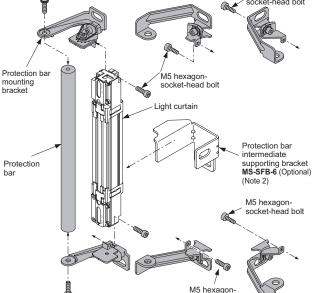

Parts List

1 di to Liot								
Designation	N	/IC-SFBH-□	MC-SFBH-□-T					
Designation	Number Remarks		Number	Remarks				
Protection bar	1 pc.	Material: Aluminum	1 pc.	Material: Aluminum				
Protection bar mounting bracket (For left side, for right side)	1 pc. each	Material: Die-cast zinc alloy	1 pc. each (Note 1)	Material: Cold rolled carbon steel (SPCC) (Trivalent chrome plated)				
Hexagon-socket-head bolt with washers	2 pcs.	2 pcs. M5 (length: 20 mm 0.787 in)		M5 (length: 20 mm 0.787 in)				
Hexagon-socket-head bolt	2 pcs.	M5 (length: 16 mm 0.630 in)	2 pcs.	M5 (length: 18 mm 0.709 in)				
Protection bar intermediate supporting bracket MS-SFB-6 (Optional) (Note 2)	1 pc.	Material: Cold rolled carbon steel (SPCC) (Trivalent chrome plated)	1 pc.	Material: Cold rolled carbon steel (SPCC) (Trivalent chrome plated)				

socket-head holt

Notes: 1) Available as a spare part. Model No.: MS-MCSFB-1-T

2) The protection bar intermediate supporting bracket MS-SFB-6 (optional) is installed to protection bars that are longer than the MC-SFBH-48(-T). Use if there is much flexure bending in the protection bar. Please contact our office for details. FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR

USE SENSORS SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION

LASER MARKERS

PLC

MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Safety Component Optical Touch Switch Control Units

SF4B-C

SF4C SF2C SF2B

LASER SENSORS

PHOTO-ELECTRIC SENSORS AREA SENSORS

PRESSURE FLOW SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

LASER MARKERS

PLC HUMAN

FA COMPONENTS

MACHINE VISION SYSTEMS CURING SYSTEMS

SF4B-C SF4C SF2C SF4B SF2B

BSF4-AH80


Definition of Sensing Heights

OPTIONS

Front protection cover (For SF4B-□G□)

		,	•
Applicable beam axes		signation	Front protection cover
Finger	Hand	Arm / foot	Model No.
23	12	6	FC-SF4BG-H12
31	16	8	FC-SF4BG-H16
39	20	10	FC-SF4BG-H20
47	24	12	FC-SF4BG-H24
55	28	14	FC-SF4BG-H28
63	32	16	FC-SF4BG-H32
71	36	18	FC-SF4BG-H36
79	40	20	FC-SF4BG-H40
95	48	24	FC-SF4BG-H48
111	56	28	FC-SF4BG-H56
127	64	32	FC-SF4BG-H64
-	72	36	FC-SF4BG-H72
-	80	40	FC-SF4BG-H80
_	88	44	FC-SF4BG-H88
_	96	48	FC-SF4BG-H96
Note: The	model Nos	given abov	e denote a single unit

Note: The model Nos. given above denote a single unit, not a pair of units. 2 units are required for use in mounting to the emitter / receiver.

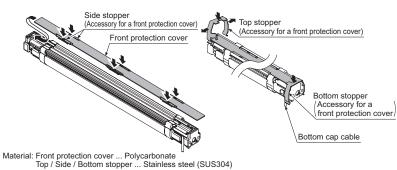

Sensing range

		SF4B-H	□G□ <v2></v2>	SF4B-A□G <v2></v2>		
	SF4B-F□G <v2></v2>	12 to 64 beam axes type	72 to 96 beam axes type	6 to 32 beam axes type	36 to 48 beam axes type	
Only emitter installed	0.3 to 6 m	0.3 to 7.5 m	0.3 to 6 m	0.3 to 7.5 m	0.3 to 6 m	
Only receiver installed	0.984 to 19.685 ft	0.984 to 24.606 ft	0.984 to 19.685 ft	0.984 to 24.606 ft	0.984 to 19.685 ft	
Both emitter and receiver installed	0.3 to 5.5 m 0.984 to 18.045 ft	0.3 to 7 m 0.984 to 22.966 ft	0.3 to 5.5 m 0.984 to 18.045 ft	0.3 to 7 m 0.984 to 22.966 ft	0.3 to 5.5 m 0.984 to 18.045 ft	

Note: The operating range is the possible setting distance between the emitter and the receiver.

Designation	Model No.	Description
Test rod ø45	SF4B-TR45	Min. sensing object for regular checking (ø45 mm ø1.772 in), with arm / foot protection type (min. sensing object ø45 mm ø1.772 in)
Laser alignment tool (Excluding SF4B-□G□)	SF-LAT-2N	Allows easy beam axis alignment using easy-to-see laser beam
Laser alignment tool (For SF4B- □ G □)	SF-LAT-4BG	Allows easy beam axis alignment using easy-to-see laser beam
Caution tape	SF-TP-BG10	Attached to the side of the light curtain to alert workers to hazards (10 m 32.8 ft long)

Designation	Model No.	Description							
Large display unit for light curtain	SF-IND-2	With the auxiliary output of the light curtain, the operation is easily observable from various directions. Specifications • Supply voltage: 24 V DC ±15 % • Current consumption: 12 mA or less • Indicators: Orange LED (8 pcs. used)							


Laser alignment tool (Excluding SF4B-GG)

• SF-LAT-2N



Laser alignment tool (For SF4B-□G□)

• SF-LAT-4BG

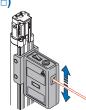


Caution tape

• SF-TP-BG10



Large display unit for light curtain

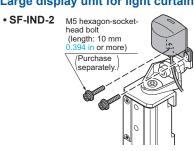

Attaches to top of light curtain. Tighten together the mounting bracket provided with the light curtain MS-SFB-1/4, MS-SFBG-1 and the attached mounting bracket of SF-IND-2.

SPECIFICATIONS

Light curtain individual specifications

SF4B-F□(G)<V2>

	Туре		Min. sensing object ø14 mm ø0.551 in type (10 mm 0.394 in beam pitch)								
Item	Model No. (Note 2)	SF4B-F23□ <v2></v2>	SF4B-F23G <v2></v2>	SF4B-F31 = < V2>	SF4B-F31G <v2></v2>	SF4B-F39 < V2>	SF4B-F39G <v2></v2>	SF4B-F47 = < V2>	SF4B-F47G <v2></v2>	SF4B-F55 < V2>	SF4B-F55G <v2></v2>
Number of beam channels		23		31		39		47		55	
Protective height		230 mm 9.055 in	244 mm 9.606 in	310 mm 12.205 in			404 mm 15.906 in	470 mm 18.504 in	484 mm 19.055 in	550 mm 21.654 in	564 mm 22.205 in
	China Press compliant (GB4584)	220 8.66	mm 61 in	300 11.8	mm 11 in		mm 60 in	460 18.1	mm 10 in	540 21.2	
Curr	ent consumption	Emitter: 80 mA or less, Receive) mA or less		Emitter: 100	mA or less,	Receiver: 160) mA or less
PFH	d	2.4 ×	10-9	2.8 ×	10-9	3.2 × 10 ⁻⁹		3.6 × 10 ⁻⁹		4.0 × 10 ⁻⁹	
MTTFd						100 years	s or more				
Net weight (Total of emitter and receiver)		510 g approx.	980 g approx.	660 g approx.	1,340 g approx.	810 g approx.	1,700 g approx.	960 g approx.	2,000 g approx.	1,110 g approx.	2,400 g approx.

	Туре	Mi	n. sensing	object ø14 r	mm ø0.551	in type (10	mm 0.394	in beam pito	ch)	
Item	Model No. (Note 2)	SF4B-F63 = < V2>	SF4B-F63G <v2></v2>	SF4B-F71 = < V2>	SF4B-F71G <v2></v2>	SF4B-F79 < V2>	SF4B-F79G <v2></v2>	SF4B-F950 <v2></v2>	SF4B-F95G <v2></v2>	
Number of beam channels		63		71		7	79		95	
Protective height		630 mm 24.803 in	644 mm 25.354 in	710 mm 27.953 in	724 mm 28.504 in	790 mm 804 mm 31.102 in 31.654 in		950 mm 37.402 in	964 mm 37.953 in	
	China Press compliant (GB4584)		620 mm 24.409 in		700 mm 27.559 in		mm 08 in	940 mm 37.007 in		
Curr	ent consumption	Emitter: 100	mA or less,	Receiver: 160 mA or less		Emitter: 115	Emitter: 115 mA or less,		Receiver: 190 mA or less	
PFH	d	4.4 ×	: 10-9	4.8 ×	: 10-9	5.2 ×	10-9	6.0 × 10 ⁻⁹		
MTT	Fd			100 years		s or more				
Net weight (Total of emitter and receiver)		1,260 g approx.	2,800 g approx.	1,420 g approx.	3,200 g approx.	1,570 g approx.	3,400 g approx.	1,870 g approx.	4,200 g approx.	

Туре	Min. sensing obje	ct ø14 mm ø0.551	in type (10 mm 0.3	94 in beam pitch)		
Item Model No. (Note 2)	SF4B-F111:: <v2></v2>	SF4B-F111G <v2></v2>	SF4B-F127:: <v2></v2>	SF4B-F127G <v2></v2>		
Number of beam channels	1.	11	12	127		
Protective height	1,110 mm 43.701 in	1,124 mm 44.252 in	1,270 mm 1,284 mm 50.000 in 50.551 in			
China Press compliant (GB4584)	1,100 43.3		1,260 mm 49.606 in			
Current consumption	Emitter: 135 mA or less, Receiver: 230 mA or less					
PFHd	6.8 × 10 ⁻⁹ 7.6 × 10 ⁻⁹					
MTTFd		100 year	s or more	or more		
Net weight (Total of emitter and receiver)	2,170 g approx.	5,000 g approx.	2,470 g approx.	5,600 g approx.		

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F. The model No. with "G" is a robust type.

2) The models with the "-01" or "-03" cannot be used with the handy-controller SFB-HC.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Safety Components

Optical Touch Switch Control Units

SF4B-C SF4C

SF2C

SF2B BSF4-AH80

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT CURTAINS/ SAFETY COMPONENTS PRESSURE/ FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

SYSTEMS

MEASUREMENT
SENSORS

STATIC
ELECTRICITY
PREVENTION
DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERPACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch

Definition of Sensing Heights

SF4B-C

SF4C

SF2C

SF4B SF2B BSF4-AH80

SPECIFICATIONS

SF4B-H□(G)<V2>

Туре		Mi	n. sensing	object ø25 i	mm ø0.984	in type (20	mm 0.787 i	n beam pito	ch)	
Item Model No. (Note 2)	SF4B-H12 < V2>	SF4B-H12G:: <v2></v2>	SF4B-H16= <v2></v2>	SF4B-H16G < V2>	SF4B-H20□ <v2></v2>	SF4B-H20G = < V2>	SF4B-H240 <v2></v2>	SF4B-H24G = < V2>	SF4B-H28□ <v2></v2>	SF4B-H28G= <v2></v2>
Number of beam channels	1	2	16		2	0	2	4	28	
Protective height	230 mm 9.055 in	244 mm 9.606 in	310 mm 12.205 in	324 mm 12.756 in	390 mm 15.354 in	404 mm 15.906 in	470 mm 18.504 in	484 mm 19.055 in	550 mm 21.654 in	564 mm 22.205 in
China Press compliant (GB4584)		mm 61 in	300 mm 11.811 in			mm 60 in		mm 10 in	540 mm 21.260 in	
Current consumption		Emitter: 70	mA or less,	Receiver: 95	mA or less		Emitter: 80	mA or less, F	Receiver: 115	mA or less
PFHd	1.8 ×	· 10 ⁻⁹	2.0 >	< 10 ⁻⁹	2.2 ×	: 10 ⁻⁹	2.4 ×	: 10 ⁻⁹	2.6 ×	: 10 ⁻⁹
MTTFd					100 years	s or more				
Net weight (Total of emitter and receiver)	510 g approx.	980 g approx.	660 g approx.	1,340 g approx.	810 g approx.	1,700 g approx.	960 g approx.	2,000 g approx.	1,110 g approx.	2,400 g approx.
Туре		Mi	in. sensing	object ø25 i	mm ø0.984	in type (20	mm 0.787 i	n beam pito	ch)	
Item Model No. (Note 2)	SF4B-H32□ <v2></v2>									SF4B-H56G□ <v2></v2>
Number of beam channels	3	32	3	36	4	.0	4	.8	5	6
Protective height	630 mm 24.803 in	644 mm 25.354 in	710 mm 27.953 in	724 mm 28.504 in	790 mm 31.102 in	804 mm 31.654 in	950 mm 37.402 in	964 mm 37.953 in	1,110 mm 43.701 in	1,124 mm 44.252 in
China Press compliant (GB4584)		mm 09 in	700 mm 27.559 in		780 mm 30.708 in		940 mm 37.007 in			06 in
Current consumption	Emitter: 80 mA or less, Receiver: 11			: 115 mA or less Emitter: 90 mA or less, F			Receiver: 140	mA or less		mA or less, o mA or less
PFHd	2.8 × 10 ⁻⁹		3.0 >	3.0 × 10 ⁻⁹		3.2 × 10 ⁻⁹		3.6 × 10 ⁻⁹		× 10 ⁻⁹
MTTFd			11		100 years or more					
Net weight (Total of emitter and receiver)	1,260 g approx.	2,800 g approx.	1,420 g approx.	3,200 g approx.	1,570 g approx.	3,400 g approx.	1,870 g approx.	4,200 g approx.	2,170 g approx.	5,000 g approx.
Туре		Min. sensing object ø25 mm ø0.984 in type (20 mm 0.787 in beam pitch)								
Item Model No. (Note 2)	SF4B-H64□ <v2></v2>	1	SF4B-H72 < V2>		SF4B-H80□ <v2></v2>	SF4B-H80G <v2></v2>	SF4B-H88□ <v2></v2>		SF4B-H96 < V2>	SF4B-H96G⊓ <v2></v2>
Number of beam channels	1	64		72		0		8		6
Protective height	1,270 mm 50.000 in	1,284 mm 50.551 in	1,430 mm 56.299 in	1,444 mm 56.850 in	1,590 mm 62.598 in	1,604 mm 63.150 in	1,750 mm 68.898 in	1,764 mm 69.449 in	1,910 mm 75.197 in	1,924 mm 75.748 in
China Press compliant (GB4584)		0 mm 06 in		0 mm		05 in		03 in		03 in
Current consumption		mA or less, omA or less	Emitter: 110) mA or less,	Receiver: 18	0 mA or less	Emitter: 120 mA or less,		Receiver: 200 mA or less	
PFHd	4.4 ×	< 10 ⁻⁹	4.8	< 10 ⁻⁹	5.2 ×	10-9	5.6 × 10 ⁻⁹		6.0 × 10 ⁻⁹	
MTTFd					100 year	s or more				
Net weight (Total of emitter and receiver)	2,470 g approx.	5,600 g approx.	2,770 g approx.	6,400 g approx.	3,070 g approx.	7,000 g approx.	3,370 g approx.	7,800 g approx.	3,670 g approx.	8,400 g approx.
			_							

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F. The model No. with "G" is a robust type.

2) The models with the "-01" or "-03" cannot be used with the handy-controller SFB-HC.

SPECIFICATIONS

SF4B-A□(G)<V2>

	Type Min. sensing object ø45 mm ø1.772 in type (40 mm 1.575 in beam pitch)										
Item	Model No. (Note 2)	SF4B-A6 < V2>	SF4B-A6G <v2></v2>	SF4B-A80 <v2></v2>	SF4B-A8G <v2></v2>	SF4B-A10 < V2>	SF4B-A10G <v2></v2>	SF4B-A12□ <v2></v2>	SF4B-A12G <v2></v2>	SF4B-A14 = < V2>	SF4B-A14G <v2></v2>
Num	ber of beam channels	6	3	3	3	1	0	1	2	1	4
Prote	ective height	230 mm 9.055 in	244 mm 9.606 in	310 mm 12.205 in	324 mm 12.756 in	390 mm 15.354 in	404 mm 15.906 in	470 mm 18.504 in	484 mm 19.055 in	550 mm 21.654 in	564 mm 22.205 in
	China Press compliant (GB4584)	200 7.87			mm 24 in	360 14.1	mm 73in	440 17.3	mm 23 in	520 20.4	
Curr	ent consumption		Emitter: 65 mA or less, Receiver: 85 mA or less				Emitter: 70 mA or less, Receiver: 95 mA or less				
PFH	d	1.5 ×	1.5 × 10 ⁻⁹ 1.6 × 10 ⁻⁹ 1.7 × 10 ⁻⁹ 1.8 × 10 ⁻⁹			1.9 ×	10-9				
MTTFd						100 years	s or more				
	weight al of emitter and receiver)	510 g approx.	980 g approx.	660 g approx.	1,340 g approx.	810 g approx.	1,700 g approx.	960 g approx.	2,000 g approx.	1,110 g approx.	2,400 g approx.
	Type Min. sensing object Ø45 mm Ø1.772 in type (40 mm 1.575 in beam pitch)										

	Туре	Type Min. sensing object ø45 mm ø1.772 in type (40 mm 1.575 in beam pitch)									
Item	Model No. (Note 2)	SF4B-A16□ <v2></v2>	SF4B-A16G <v2></v2>	SF4B-A18 = < V2>	SF4B-A18G <v2></v2>	SF4B-A20 = < V2>	SF4B-A20G <v2></v2>	SF4B-A24□ <v2></v2>	SF4B-A24G <v2></v2>	SF4B-A28□ <v2></v2>	SF4B-A28G <v2></v2>
Num	nber of beam channels	1	6	1	8	2	0	2	4	2	8
Prot	ective height	630 mm 24.803 in	644 mm 25.354 in	710 mm 27.953 in	724 mm 28.504 in	790 mm 31.102 in	804 mm 31.654 in	950 mm 37.402 in	964 mm 37.953 in	1,110 mm 43.701 in	1,124 mm 44.252 in
	China Press compliant (GB4584)	600 23.6	mm 22 in		mm 72 in		mm 21 in	920 36.2		1,080 42.5	
Curr	rent consumption	Emitter: 70	Emitter: 70 mA or less, Receiver: 95 mA or less		Emitter: 80 Receiver: 12	,					
PFH	ld	2.0 ×	2.0 × 10 ⁻⁹ 2.1 × 10 ⁻⁹ 2.2 × 10 ⁻⁹ 2.4 × 10 ⁻⁹		2.6 × 10 ⁻⁹						
MTTFd			100 years or more								
	weight al of emitter and receiver)	1,260 g approx.	2,800 g approx.	1,420 g approx.	3,200 g approx.	1,570 g approx.	3,400 g approx.	1,870 g approx.	4,200 g approx.	2,170 g approx.	5,000 g approx.

	Туре	Min. sensing object ø45 mm ø1.772 in type (40 mm 1.575 in beam pitch)									
Item	Model No. (Note 2)	SF4B-A32□ <v2></v2>	SF4B-A32G <v2></v2>	SF4B-A36□ <v2></v2>	SF4B-A36G <v2></v2>	SF4B-A40 = < V2>	SF4B-A40G <v2></v2>	SF4B-A440 <v2></v2>	SF4B-A44G <v2></v2>	SF4B-A48□ <v2></v2>	SF4B-A48G <v2></v2>
Num	nber of beam channels	3	2	3	6	4	0	4	4	4	8
Prote	ective height	1,270 mm 50.000 in	1,284 mm 50.551 in	1,430 mm 56.299 in	1,444 mm 56.850 in	1,590 mm 62.598 in	1,604 mm 63.150 in	1,750 mm 68.898 in	1,764 mm 69.449 in	1,910 mm 75.197 in	1,924 mm 75.748 in
	China Press compliant (GB4584)	· ') mm 19 in	1,400 55.1) mm 18in	1,560 61.4) mm 17 in	1,720 67.7) mm 16 in	1,880 74.0) mm 16 in
Curr	ent consumption	Emitter: 80 Receiver: 12	,	' Emitter 85 ma or less Deceiver 130 ma or less Emitter 45 ma or less E			Receiver: 140	mA or less			
PFH	ld	2.8 ×	10-9	3.0 × 10 ⁻⁹ 3.2 × 10 ⁻⁹ 3.4 × 10 ⁻⁹		3.6 ×	10-9				
MTTFd			100 years or more								
	weight al of emitter and receiver)	2,470 g approx.	5,600 g approx.	2,770 g approx.	6,400 g approx.	3,070 g approx.	7,000 g approx.	3,370 g approx.	7,800 g approx.	3,670 g approx.	8,400 g approx.

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F. The model No. with "G" is a robust type.

2) The models with the "-01" or "-03" cannot be used with the handy-controller SFB-HC

Light curtain common specifications

	Туре	Min. sensing object ø14 mm ø0.551 in type	Min. sensing object ø25 mm ø0.984 in type	Min. sensing object ø45 mm ø1.772 in type		
	Model No.	SF4B-F□(G) <v2></v2>	SF4B-H□(G) <v2></v2>	SF4B-A□(G) <v2></v2>		
	SFB-HC non-compatible	SF4B-F□-01 <v2></v2>	SF4B-H□(G)-01 <v2></v2>	SF4B-A□-01 <v2></v2>		
Item	Korean press compliant	SF4B-F□-03 <v2></v2>	SF4B-H _□ -03 <v2></v2>			
S	International standard	IEC 61496-1/2 (Type 4), ISO 13849-1 (Category 4, PLe), IEC 61508-1 to 7 (SIL3)				
darc	Japan	JIS B 9704-1/2 (T	Type 4), JIS B 9705-1 (Category 4), JIS C 0	0508-1 to 7 (SIL3)		
stan 2)	Europe (EU)	EN 61496-1 (Type 4), EN ISO 13849-1 (Category 4, PLe), EN 61508-1 to 7 (SIL3), EN 55011, EN 50178, EN 61000-6-2				
cable st (Note	North America	ANSI/UL 61496-1/2 (Type 4), ANSI/UL 508, UL 1998 (Class 2), CAN/CSA 61496-1/2 (Type 4), CAN/CSA C22.2 No.14, OSHA 1910.212, OSHA 1910.217(C), ANSI B11.1 to B11.19, ANSI/RIA 15.06				
pplic	South Korea (S-Mark)	S1-G-35-2005, S2-W-11-2003 (SF4B -□< V2> only)				
₹	China (GB)	GB 4584 (excludina SF4B -□- 03<v2></v2>)				

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) PLe SIL3 compliant from production in August 2009. Models Nos. having the suffix "**G**" are robust type.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC

AREA SENSORS

UGHT OURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch

Switch

Control
Units

Definition of Sensing Heights

SF4B-C SF4C SF2C

SF4B SF2B

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS PARTICULAR

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

SENSORS

MEASURE

MENT SENSORS LASER MARKERS

PLC

HUMAN MACHINE INTERFACES COMPONENTS

MACHINE

SYSTEMS

CURING

Control Definition of Sensing Heights

SF4B-C SF4C SF2C

SF4B SF2B BSF4-AH80

SPECIFICATIONS

Light curtain common specifications

		-				
	Туре	Min. sensing object ø14 mm ø0.551 in type	Min. sensing object ø25 mm ø0.984 in type	Min. sensing object ø45 mm ø1.772 in type		
	Model No.	SF4B-F□(G) <v2></v2>	SF4B-H□(G) <v2></v2>	SF4B-A□(G) <v2></v2>		
	SFB-HC non-compatible	SF4B-F□-01 <v2></v2>	SF4B-H□(G)-01 <v2></v2>	SF4B-A□-01 <v2></v2>		
Item	Korean press compliant	SF4B-F□-03 <v2></v2>	SF4B-H□-03 <v2></v2>			
Opera	ating range (Note 3)	0.3 to 7 m 0.984 to 22.966 ft	12 to 64 beam channels type: 0.3 to 9 m 0.984 to 29.528 ft 72 to 96 beam channels type: 0.3 to 7 m 0.984 to 22.966 ft	6 to 32 beam channels type: 0.3 to 9 m 0.984 to 29.528 ft 36 to 48 beam channels type: 0.3 to 7 m 0.984 to 22.966 ft		
Min. s	sensing object (Note 4)	ø14 mm ø0.551 in opaque object	ø25 mm ø0.984 in opaque object	ø45 mm ø1.772 in opaque object		
Effec	tive aperture angle	±2.5° or less [for an operating	range exceeding 3 m 9.843 ft (conforming	to IEC 61496-2 / UL 61496-2)]		
Supp	ly voltage		24 V DC ±10 % Ripple P-P 10 % or less			
	rol outputs SD 1, OSSD 2)	PNP open-collector transistor / NPN open-collector transistor (switching method) • When selecting PNP output: Max. source current 200 mA, When selecting NPN output: Max. sink current 200 mA • Applied voltage: same as supply voltage (When selecting PNP output: between the control output and +V, When selecting NPN output: between the control output and 0 V) • Residual voltage: 2.5 V or less (When selecting PNP output: source current 200 mA, when selecting NPN output: sink current 200 mA) (when using 20 m 65.617 ft length cable)				
	Operation mode	ON when all beam channels are received, OFF when one or more	re beam channels are interrupted (OFF also in case of any malfur	nction in the light curtain or the synchronization signal)(Note 5,6)		
F	Protection circuit		Incorporated			
Resp	onse time	OFF re	esponse: 14 ms or less, ON response: 80 to	90 ms		
	iary output -safety output)	PNP open-collector transistor / NPN open-collector transistor (switching method) • When selecting PNP output: Max. source current 60 mA, When selecting NPN output: Max. sink current 60 mA • Applied voltage: same as supply voltage (When selecting PNP output: between the auxiliary output and +V, When selecting NPN output: between the auxiliary output and 0 V) • Residual voltage: 2.5 V or less (When selecting PNP output: source current 60 mA, when selecting NPN output: sink current 60 mA) (when using 20 m 65.617 ft length cable)				
	Operation mode	OFF when control outputs are ON, ON when control ou	utputs are OFF [Factory setting, operating mode can be of	changed using the SFB-HC (optional) handy-controller].		
F	Protection circuit		Incorporated			
F	Responce time	OFF	replay: 34 ms or less, ON replay 110 ms or	rless		
Interf	erence prevention function	Incorporated (Note 7) (Available only when in series connection for SF4B-□-03 <v2>)</v2>				
Emissi	on halt function / Interlock function	Incorporated / Incorporated [Manual reset / Auto reset (Note 8)]				
Exterr	nal device monitoring function	Incorporated				
Overri	ide function / Muting function	Incorporated (Note 7) (excluding SF4B-□-03 <v2>) / Incorporated (Note 7) (excluding SF4B-□-03<v2>)</v2></v2>				
Optio	nal functions (Note 9)	Fixed blanking, floating blanking, auxiliary muting setting changing, protecting, light e	output switching, interlock setting changing emitting amount control	g, external relay monitor setting changing,		
g [Degree of protection		IP67 / IP65 (IEC)			
Environmental resistance	Ambient temperature	-10 to +55 °C +14 to +131 °F (No	dew condensation or icing allowed), Stora	ge: -25 to +70 °C -13 to +158 °F		
esis	Ambient humidity		30 to 85 % RH, Storage: 30 to 95 % RH			
<u>a</u> 4	Ambient illuminance	Incandes	scent light: 3,500 &x or less at the light-recei	ving face		
Jeff C	Dielectric strength voltage	1,000 V AC for one mi	n. between all supply terminals connected t	ogether and enclosure		
onn	nsulation resistance	20 MΩ, or more, with 500 V D	C megger between all supply terminals con	nected together and enclosure		
<u> </u>	/ibration resistance	10 to 55 Hz frequency, 0.	75 mm 0.030 in amplitude in X, Y and Z dire	ections for two hours each		
Ш	Shock resistance 300 m/s² acceleration (30 G approx.) in X, Y and Z directions for three times each					
Emitt	ing element	Infrared	LED (Peak emission wavelength: 870 nm 0	.034 mil)		
Mate	rial	Enclosure: Aluminium, Upper and lo	wer edges: Iron, Sensing surface: Polycarb	onate and Polyester resin, Cap: PBT		
Conne	ecting method / Cable length	Connector / Total length up to 50 m 164.	042 ft is possible for both emitter and receiv			
Acces	ssories	MS-SFB-2 (Intermediate supporting bracket): (Note 11) MS-SF4BG-2 (Intermediate supporting bracket): (Note 12) SF4B-TR14 (Test rod): 1 No.	MS-SFB-2 (Intermediate supporting bracket): (Note 11) MS-SF4BG-2 (Intermediate supporting bracket): (Note 12) SF4B-TR25 (Test rod): 1 No.	MS-SFB-2 (Intermediate supporting bracket): (Note 11) MS-SF4BG-2 (Intermediate supporting bracket): (Note 12)		

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

- 2) PLe SIL3 compliant from production in August 2009. Models Nos. having the suffix "G" are robust type.
- 3) The operating range is the possible setting distance between the emitter and the receiver.
- 4) When the floating blanking function is used, the size of the min. sensing object is changed. For details, refer to "Safety distance" (p.595~).
- 5) The outputs are not "OFF" when muting function is active even if the beam channel is interruped.
 6) In case the blanking function is valid, the operation mode is changed. For details, refer to "Safety distance" (p.595~).
- 7) In case of using this function, please use 12-core cable.
- 8) The manual reset and auto reset are possible to be switched depending on the wiring status.
- 9) In case of using optional function, the handy-controller (SFB-HC) (optional) is required. However, a handy-controller cannot be used with the SF4B-0-01<V2>, SF4B---03<V2> and the SF-C14EX-01.
- 10) The cable can be extended within 30 m 98.425 ft (for emitter / receiver) when two light curtains are connected in series, within 20 m 65.617 ft when three light curtains are connected in series. Furthermore, when the muting lamp is used, the cable can be extended within 40 m 131.234 ft (for emitter / receiver).

 11) The intermediate supporting bracket (MS-SFB-2) is enclosed with the following models. The number of sets required varies depending on the product.

 1 set: SF4B-F=<V2>......Light curtain with 79 to 111 beam channels, SF4B-H=<V2>......Light curtain with 40 to 56 beam channels, SF4B-A < V2>.....Light curtain with 20 to 28 beam channels
 - 2 sets: SF4B-F127<V2>, SF4B-H

 <N2>...Light curtain with 32 to 40 beam channels, SF4B-A

 <N2>...Light curtain with 32 to 40 beam channels 3 sets: SF4B-H=<V2>.....Light curtain with 88 to 96 beam channels, SF4B-A=<V2>.....Light curtain with 44 to 48 beam channels
- 12) The intermediate supporting bracket (MS-SF4BG-2) is enclosed with the following models.
 - 1 set: SF4B-F□G<V2>.......Light curtain with 79 to 127 beam channels, SF4B-H□G□<V2>......Light curtain with 40 to 64 beam channels SF4B-A□G<V2>......Light curtain with 20 to 32 beam channels 2 sets: SF4B-H_G_<V2> Light curtain with 72 to 96 beam channels, SF4B-A_G<V2> Light curtain with 36 to 48 beam channels


SPECIFICATIONS


Control units

Model No.	SF-C11 (Note 2)	SF-C12	SF-C13 (Note 2)			
Connectable light curtains SF4B / SF2B series		SF4B series	Light curtains manufactured by Panasonic Industrial Devices SUNX			
Applicable standards	IEC 61496-1, EN	IEC 61496-1, EN 61496-1, ANSI/UL 61496-1, CAN/CSA 61496-1, JIS B 9704-1				
Control category	ISO 13849-1 (EN ISO 1	3849-1, JIS B 9705-1) compliance up to Ca	ategory 4, PLe standards			
Supply voltage / Current consumption	24 V DC ±10 % R	ipple P-P 10 % or less / 100 mA or less (ex	cluding light curtain)			
Fuse (rating)	Built-in electronic fu	use, Triggering current: 0.5 A or more, Reso	et after power down			
Enabling path	NO contact × 3 (13-14, 23-24, 33-34)	NO contact × 2 (13-14, 23-24)	NO contact × 3 (13-14, 23-24, 33-34)			
Utilization category		AC-15, DC-13 (IEC 60947-5-1)				
Rated operation voltage (Ue) / Rated operation current (le)	30 V DC / 6 A, 230 V AC / 6 A, resistive load (For inductive load, during contact protection) Min. applicable load: 10 mA (at 24 V DC) (Note 3)	(For inductive load, during contact protection)	30 V DC / 4 A, 230 V AC / 4 A, resistive load (For inductive load, during contact protection) Min. applicable load: 10 mA (at 24 V DC) (Note 3)			
Contact resistance	100 mΩ or less (initial value)	50 mΩ or less (initial value)	100 mΩ or less (initial value)			
Contact protection fuse rating	6 A (slow blow)	3 A (slow blow)	4 A (slow blow)			
Pick-up delay (Auto reset / Manual reset)	80 ms or less / 90 ms or less	30 ms or less / 30 ms or less	80 ms or less / 90 ms or less			
Response time	10 ms or less	14 ms or less	10 ms or less			
Auxiliary output	Safety relay contact (NC contact) ×1 (41-42) (Related to enabling path)	Safety relay contact (NC contact) × 1 (31-32) (Related to enabling path)	Safety relay contact (NC contact) × 1 (41-42) (Related to enabling path)			
Rated operation voltage / current	24 V DC / 2 A, Min. applicable load: 10 mA (at 24 V DC)	30 V DC / 3 A, Min. applicable load: 15 mA (at 24 V DC)	24 V DC / 2 A, Min. applicable load: 10 mA (at 24 V DC)			
Contact protection fuse rating	2 A (slow blow)	3 A (slow blow)	2 A (slow blow)			
Semiconductor auxiliary output (AUX)	<minus (setting="" for="" ground="" pnp)=""> PNP open-collector transistor NPN open-collector transistor</minus>		PNP open-collector transistor			
Output operation	Related to auxiliary output of light curtain		ON when the light curtain is interrupted			
Excess voltage category	П	Ш	П			
Polarity selection function (Note 4)	Incorporated (Sliding switch allow: Minus ground: Correspond to PNF Plus ground: Correspond to NPN		Incorporated (Cable connection allows selection of plus / minus ground) Minus ground: Correspond to PNP output light curtain Plus ground: Correspond to NPN output light curtain			
Pollution degree		2				
Protection	Enclosure: IP40, Terminal: IP20	IP65	Enclosure: IP40, Terminal: IP20			
Ambient temperature	-10 to +55 °C +14 to +131 °F (No	dew condensation or icing allowed), Stora	age: -25 to +70 °C -13 to +158 °F			
Enclosure material	ABS	Die-cast aluminum	ABS			
Weight	Net weight: 320 g approx.	Net weight: 1 kg approx.	Net weight: 200 g approx.			


Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

- 2) SF-C11 and SF-C13 have acquired the Korea S-mark.
- 3) If several SF-C11 or SF-C13 units are being used in a line together, leave a space of 5 mm 0.197 in or more between each unit. If the units are touching each other, reduce the rated operating current for safety output in accordance with the ambient operating temperature as shown in the graphs at right.
- 4) Please switch the sliding switch to the PNP side for minus ground and to the NPN side for plus ground.
- 5) For details of control unit SF-C1^a (SF-C10 series), refer to p.703.

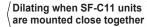

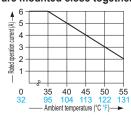

Dilating when SF-C13 units are mounted close together

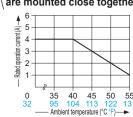

	—— Artibient emperature (C r)—> —— Artibient emperature (C r)—>			
Model No.	SF-C14EX(-01) (Note 2)			
Connectable light curtains	SF4B series			
Applicable standards	IEC 61496-1, EN 61496-1, ANSI/UL 61496-1, CAN/CSA 61496-1, JIS B 9704-1			
Control category	ISO 13849-1 (EN ISO 13849-1, JIS B 9705-1) compliance up to Category 4, PLe standards			
Supply voltage / Current consumption	24 V DC ±10 % Ripple P-P 10 % or less / 0.2 A or less (Excluding light curtain and other external connecting device)			
Enabling path (Enabling path 1, 2, 3)	PNP open-collector transistor 2 outputs × 3 or NPN open-collector transistor 2 outputs × 3 (selectable using a slider switch)			
Operation mode (Output operation)	Enabling path 1: ON when the light curtain is in light receiving condition, OFF when the light curtain is in light interrupted condition (Note 3) Enabling path 2: ON when the light curtain is in light receiving condition or the muting function is valid OFF when the light curtain is in light interrupted condition and the muting function is invalid (Note 3) Enabling path 3: ON when the emergency stop is invalid, OFF when the emergency stop is valid			
Response time	OFF response: 14 ms or less (Enabling path 1 and 2: including the response time of the light curtain) ON response: 90 ms or less (auto-reset) / 140 ms or less (manual reset) (Note 4)			
Auxiliary outputs [Auxiliary output 1, 2, 3, 4] (Note 5)	PNP open-collector transistor × 3 or NPN open-collector transistor × 3 (selectable using a slider switch) <when is="" output="" pnp="" selected=""> • Maximum source current: 60 mA or less • Applied voltage: same as supply voltage (between the auxiliary output and +V) • Residual voltage: 2 V or less (at 60 mA source current) • Residual voltage: 2 V or less (at 60 mA sink current)</when>			
Operation mode (Output operation)	Auxiliary output 1: ON when the muting function is invalid, OFF when the muting function is valid Auxiliary output 2: ON when the override function is invalid, OFF when the override function is valid Auxiliary output 3: ON when the muting lamp is normal, OFF when the muting lamp is error Auxiliary output 4: ON when the light curtain is in light interrupted condition, OFF when the light curtain is in light receiving condition (Note 5)			
Muting lamp output	Applicable muting lamp: 24 V DC, 3.6 to 30 W (L1, L2 of each unit)			
Protection	Enclosure: IP40, Terminal: IP20			
Ambient temperature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -25 to +70 °C -13 to +158 °F			
Material	Enclosure: ABS			
Connection terminal	Detachable spring-cage terminal			
Weight	Net weight: 250 g approx.			

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

- 2) SF-C14EX-01 is Handy-controller non-compatible type.
- 3) Both enabling path 1 and 2 are OFF when the emergency stop is valid regardless of whether the light curtain is in the light receiving or light interrupted condition.
- 4) The auto-reset cannot be used with enabling path 3.
- 5) The auxiliary output incorporated in the **SF4B** series is outputed.
 6) For details of control unit **SF-C14EX(-01)**, refer to p.703.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Safety Component Control Units

SF4B-C

SF4C

SF2C

SF2B

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT CURTAINS/ SAFETY COMPONENTS PRESSURE/ FLOW SENSORS

PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR
OPTIONS

SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80

SPECIFICATIONS

Handy-controller

Model No.	SFB-HC
Supply voltage	24 V DC ±10 % Ripple P-P10 % or less (common to light curtain power supply)
Current consumption	65 mA or less
Communication method	RS-485 two-way communications (Specific procedure)
Digital display	4-digit red LED display × 2 (Selected beam channels, setting contents etc. are displayed.)
Function indicator	Green LED × 9 (set function is displayed.)
Functions	Fixed blanking (Factory setting: Disabled) / Floating blanking (Factory setting: Disabled) / Auxiliary output change (Factory setting: Negative Logic of OSSD) / Light emitting amount control (Factory setting: Disabled) / Muting setting change [Factory setting: All beam channels enabled, A = B, Setting of the muting lamp diagnosis function enabled (Ver. 2 or later), Muting sensor output operation setting N.O. / N.O. (Ver. 2.1 or later)] Interlock setting change (Factory setting: start / restart) / External device monitoring setting change (Factory setting: Enabled, 300 ms) / Override setting changing function 60 sec. (Ver. 2.1 or later) / Setting detail monitoring / Protecting (Factory setting: Disabled) (Factory password setting: 0000) / Initialization / Copy
Ambient temperature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -25 to +70 °C -13 to +158 °F
Ambient humidity	30 to 85 % RH, Storage: 30 to 85 % RH
Voltage withstandability	1,000 V AC for one min. between all supply terminals connected together and enclosure
Insulation resistance	$20~\text{M}\Omega$, or more, with 500 V DC megger between all supply terminals connected together and enclosure
Cable	8-core shielded cable, 0.5 m 1.640 ft long, with a connector at the end (2 cables)
Material	Enclosure: ABS
Weight	Net weight: 200 g approx.
Accessories	Adapter cable: 2 cables

Note: Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

Laser alignment tool

Model No.	CELATON (CELATADO (For CEADA CA)				
Item	SF-LAT-2N / SF-LAT-4BG (For SF4B-□G□)				
Supply voltage	3 V (LR6 battery × 2 pcs.)				
Battery	1.5 V (LR6 battery) × 2 pcs. (replaceable)				
Battery lifetime	30 hours approx. of continuous operation (LR6 battery, at +25 °C +77 °F ambient temperature)				
Light source	Red semiconductor laser: Class 2 (IEC / JIS / FDA) (Max. output: 1 mW, Peak emission wavelength: 650 nm 0.026 mil) (Note 2)				
Spot diameter	10 mm 0.394 in approx. (at 5 m 16.404 ft distance)				
Ambient temperature	0 to +40 °C +32 to +104 °F (No dew condensation), Storage: 0 to +55 °C +32 to +131 °F				
Ambient humidity	35 to 85 % RH, Storage: 35 to 85 % RH				
Material	Enclosure: ABS, Mounting part: Aluminum				
Weight	Net weight: 200 g approx. (including batteries)				
Accessories	LR6 battery: 2 pcs.				

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) As for FDA regulation, the product complies with 21 CFR 1040.10 and 1040.11 based on Laser Notice No. 50, dated June 24, 2007, issued by CDRH under the FDA.

Corner mirror


Model No.		RF-SFBH-□
Attenuation rate of sensing range		With one mirror: Declined to 90 %, With two mirrors: Declined to 80 % (When used in combination with the SF4B series)
tal	Ambient temperature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -25 to +70 °C -13 to +158 °F
Environmental resistance	Ambient humidity	30 to 85 % RH, Storage: 30 to 95 % RH
Environme resistance	Vibration resistance	10 to 55 Hz frequency, 0.75 mm 0.030 in amplitude in X, Y and Z directions for two hours each
E Se	Shock resistance	300 m/s² acceleration (30 G approx.) in X, Y and Z directions for three times each
Mate	erial	Enclosure: Aluminum, Mounting bracket: Stainless steel, Mirror (rear surface mirror): Glass, Side cover: EPDM
Acce	essories	Intermediate supporting bracket: 1 set (RF-SFBH-40/48/56/64), 2 sets (RF-SFBH-72/80/88/96)

Note: Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

I/O CIRCUIT AND WIRING DIAGRAMS

I/O circuit diagram

<In case of using I/O circuit for PNP output>

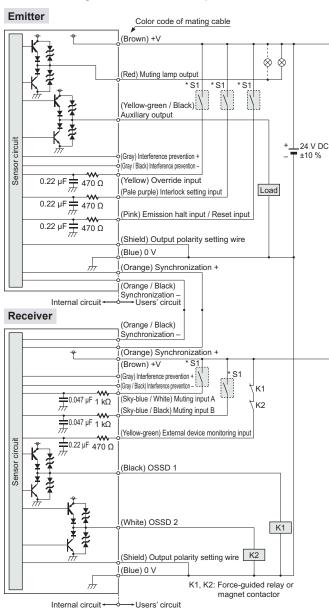

Note: The above diagram is when using a 12-core cable. If an 8-core cable is used, the red, yellow, gray, gray / black, sky-blue / white and sky-blue / black lead wires are absent.

* S1

Switch S1

Emission halt input / Reset input

For manual reset

Vs to Vs – 2.5 V (sink current 5 mA or less): Emission halt (Note 1) Open: Emission

For automatic reset


Vs to Vs - 2.5 V (sink current 5 mA or less): Emission (Note 1) Open: Emission halt

• Interlock setting input, Override input, Muting input A / B, External device monitoring input

Vs to Vs – 2.5 V (sink current 5 mA or less): Enabled (Note 1) Open: Disabled

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

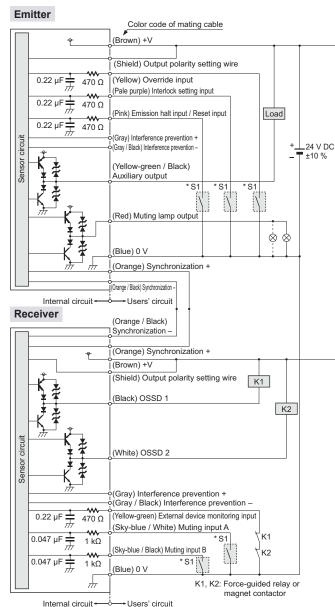

Note: The above diagram is when using a 12-core cable. If an 8-core cable is used, the red, yellow, gray, gray / black, sky-blue / white and sky-blue / black lead wires are absent.

* S

Switch S1

• Emission halt input / Reset input

For manual reset

0 to +1.5 V (source current 5 mA or less): Emission halt

Open: Emission

For automatic reset

0 to +1.5 V (source current 5 mA or less): Emission

Open: Emission halt

• Interlock setting input, Override input, Muting input A / B,

External device monitor input

0 to +1.5 V (source current 5 mA or less): Enabled

Open: Disabled

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

PARTICULAR

USE SENSORS SENSOR OPTIONS

WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS

> MACHINE VISION SYSTEMS

> > JV CURING SYSTEMS

Selection Guide

Safety Components Optical Touch Switch

Control Units

Definition of

SF4B-C

SF4C SF2C

SF4B

SF2B BSF4-AH80 AREA SENSORS

PARTICULAR

SENSORS

WIRE-SAVING SYSTEMS MEASURE MENT SENSORS

LASER MARKERS

PLC HUMAN

ENERGY CONSUMPTION VISUALIZATION COMPONENTS COMPONENTS

MACHINE VISION

CURING

Control Sensing Heights

SF4B-C SF4C SF2C


SF4B SF2B BSF4-AH80

I/O CIRCUIT AND WIRING DIAGRAMS

The instruction manual can be downloaded from our website.

Connection example

Standard components (8-core cable): Interlock function "enabled (manual reset)", external device monitoring function "enabled" <In case of using I/O circuit for PNP output>

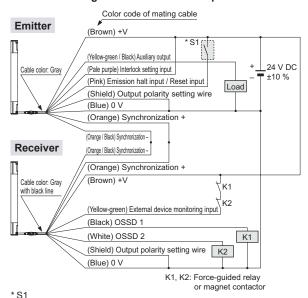

Switch S1

Emission halt input / Reset input For manual reset

Vs to Vs - 2.5 V (sink current 5 mA or less): Emission halt (Note)


Open: Emission For automatic reset

Vs to Vs – 2.5 V (sink current 5 mA or less): Emission (Note)

Open: Emission halt

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

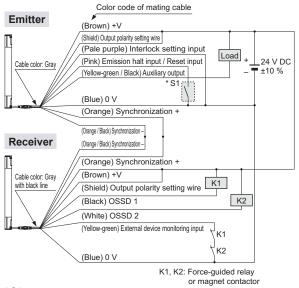


Switch S1 Emission halt input / Reset input For manual reset 0 to +1.5 V (source current 5 mA or less): Emission halt Open: Emission

Open: Emission halt


For automatic reset 0 to +1.5 V (source current 5 mA or less): Emission The diagram at left shows the configuration when using PNP output, interlock function "enabled (manual reset)" and external device monitoring function "enabled".

In case of setting the interlock function to "disabled (automatic reset)"

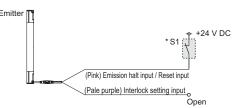

* Refer to the SF4B<V2> instruction manual for details of the interlock function.


In case of setting the external device monitoring function to "disabled"

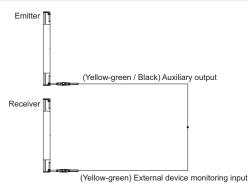

* Refer to the SF4B<V2> instruction manual for details of the external device monitoring function.


The diagram at left shows the configuration when using NPN output, interlock function "enabled (manual reset)" and external device monitoring function "enabled".

In case of setting the interlock function to "disabled (automatic reset)"

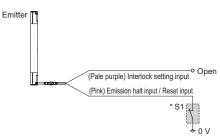

 * Refer to the ${\bf SF4B}{<}{\bf V2}{>}$ instruction manual for details of the interlock function.

In case of setting the external device monitoring function to "disabled"

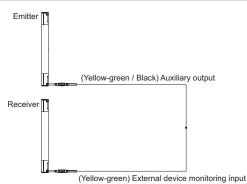

monitoring function.

Refer to the SF4B<V2> instruction manual for details of the external device


I/O CIRCUIT AND WIRING DIAGRAMS

The instruction manual can be downloaded from our website.

Connection example

Muting control components (12-core cable, with interference prevention wires): Interlock function "disabled (automatic reset)", external device monitoring function "disabled"

<In case of using I/O circuit for PNP output>

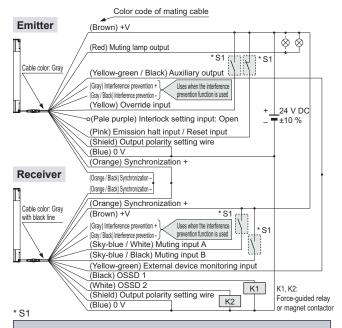

Switch S1

• Emission halt input / Reset input For manual reset


Vs to Vs - 2.5 V (sink current 5 mA or less): Emission halt (Note), Open: Emission For automatic reset

Vs to Vs – 2.5 V (sink current 5 mA or less): Emission (Note), Open: Emission halt

 Override input, Muting input A / B, External device monitoring input Vs to Vs – 2.5 V (sink current 5 mA or less): Enabled (Note), Open: Disabled

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

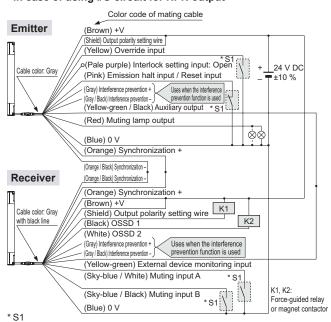

Switch S1

• Emission halt input / Reset input

For manual reset


0 to +1.5 V (source current 5 mA or less): Emission halt, Open: Emission For automatic reset

0 to +1.5 V (source current 5 mA or less): Emission, Open: Emission halt

 Override input, Muting input A / B, External device monitoring input 0 to +1.5 V (source current 5 mA or less): Enabled, Open: Disabled The diagram at left shows the configuration when using PNP output, interlock function "disabled (automatic reset)" and external device monitoring function "disabled".


In case of setting the interlock function to "enabled (manual reset)"

 When the interlock function is "enabled (manual reset)", the override function cannot be used.

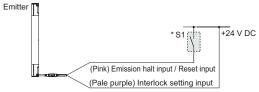

* Refer to the **SF4B<V2>** instruction manual for details of the interlock function.

In case of setting the external device monitoring function to "enabled"

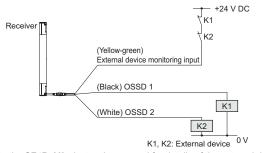


* Refer to the SF4B<V2> instruction manual for details of the external device monitoring function.

The diagram at left shows the configuration when using NPN output, interlock function "disabled (automatic reset)" and external device monitoring function "disabled".


In case of setting the interlock function to "enabled (manual reset)"

 When the interlock function is "enabled (manual reset)", the override function cannot be used.

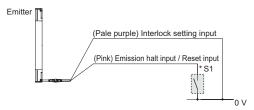

 * Refer to the ${\bf SF4B}{<}{\bf V2}{>}$ instruction manual for details of the interlock function.

In case of setting the external device monitoring function to "enabled"

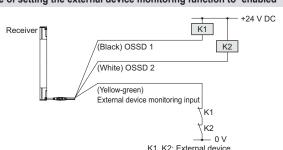

* Refer to the **SF4B<V2>** instruction manual for details of the external device monitoring function.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

> MACHINE VISION SYSTEMS

> > / JRING /STEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units

SF4B-C

SF4C SF2C

SF4B SF2B

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE SENSORS

PARTICULAR SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE MENT SENSORS STATIC ELECTRICITY PREVENTION

DEVICES LASER MARKERS

PLC HUMAN

FA COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Light Safet Optical Touch Switch Control Sensing Height

SF4B-C SF4C SF2C

SF4B SF2B BSF4-AH80

I/O CIRCUIT AND WIRING DIAGRAMS

The instruction manual can be downloaded from our website.

When SF-C11 is connected to the light curtain, be sure to

use the following mating cable.


SFB-CB_□, SFB-CCJ10_□

SF-C11

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)

· Set the light curtain input polarity selection switch to the PNP side and ground the 0 V line.

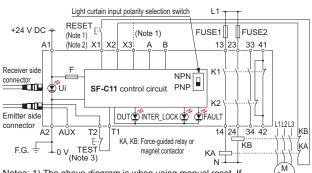

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.

- 2) Use a momentary-type switch as the reset (RESET) button.
- 3) Emission halt occurs when the test (TEST) button is open, and emission occurs when the test (TEST) button is short-circuited. If not using the test (TEST) button, short-circuit T1 and T2.

Terminal arrangement diagram					
	Terminal	Function			
	A1	+24 V DC			
	A2	0 V			
	13-14, 23-24, 33-34	Enabling path (NO contact × 3)			
24 O X2 O T	41-42	Auxiliary output (NC contact × 1)			
	X1	Reset output terminal			
41 SH B 42 AUX	X2	Reset input terminal (Manual)			
	X3	Reset input terminal (Automatic)			
	Α	Not used			
	В	Not used			
	T1	Test output terminal			
	T2	Test input terminal			

Semiconductor auxiliary output

Pin layout for light curtain connectors


AUX



Connector pin No.	Emitter side connector	Receiver side connector
1	Interlock	OSSD 2
2	+24 V DC	+24 V DC
3	Emission halt	OSSD 1
4	Auxiliary output	EDM (External relay monitor)
5	Synchronization wire +	Synchronization wire +
6	Synchronization wire –	Synchronization wire –
7	0 V	0 V
8	Shield wire	Shield wire

For NPN output (plus ground)

· In the above diagram, set the light curtain input polarity selection switch to the NPN side and ground the + side.

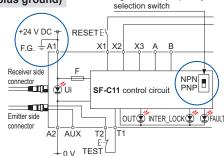


Light curtain input polarity

SF-C12

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)

· Set the two light curtain input polarity select switches to the PNP side and connect the FG terminal to the 0 V line.

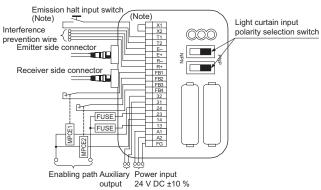

Note: The above diagram is when using manual reset. If automatic reset is used, connect a normally closed type pushbutton switch between T1 and T2 and leave between X1 and X2 open.

For NPN output (plus ground)

• In the above diagram, set the two light curtain input polarity selection switches to the NPN side and connect the F.G. terminal to the + side.

When SF-C12 is connected to the light curtain, be sure to use the following mating cable. SFB-CB05-MU, SFB-CCJ10₋MU

Terminal arrangement diagram

Terminal	Function
FG	Frame ground (F.G.) terminal
A2	0 V
A1	+24 V DC
13-14, 23-24	Enabling path (NO contact × 2)
31-32	Auxiliary output (NC contact × 1)
FB4	External relay
FB3	monitor terminal 2
FB2	External relay
FB1	monitor terminal 1

Terminal	Function
R+	Interference prevention wire – (Receiver side)
R-	Interference prevention wire + (Receiver side)
E+	Interference prevention wire – (Emitter side)
E-	Interference prevention wire + (Emitter side)
T2	Emission halt input
T1	terminal
X2	Automatic reset / manual reset selection terminal
X1	Manual reset: X1 – X2 short-circuited

Pin layout for light curtain connectors



Note: Input and output for pin Nos. 11 and 12 are not used by this product.

Connector	Emitter side	Receiver side
pin No.	connector	connector
1	Interlock	OSSD 2
2	+24 V DC	+24 V DC
3	Emission halt	OSSD 1
4	Auxiliary output	EDM (External relay monitor)
(5)	Synchronization wire +	Synchronization wire +
6	Synchronization wire –	Synchronization wire –
7	0 V	0 V
8	Shield wire	Shield wire
9	Interference prevention wire +	Interference prevention wire +
10	Interference prevention wire -	Interference prevention wire -
11)	(Override input)	(Muting input 1)
(12)	(Muting lamp output)	(Muting input 2)


I/O CIRCUIT AND WIRING DIAGRAMS

SF-C13

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)

 Connect the light curtain control outputs OSSD 1 and OSSD 2 to S1 and S2 respectively.

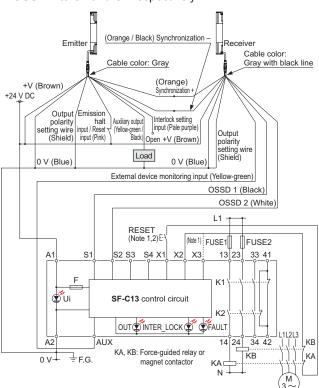

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.

2) Use a momentary-type switch as the reset (RESET) button.

Terminal arrangement diagram


1		_	-	П	ı	_
	П	Ð	0	П	A1	
	П	Ð	0	Ī	A2	Π
		O	0	Ī	S1	_
		0	0	Ī	S2	,
	П	Ð	0	П	S3	-
	П	Ð	0	Π	S4	;
	П	Q	0	Ī	AUX	Т
		0	0	Ī	X1	4
	П		0	П	X2	
	П	Ð	0	Π	X3	
	П	0	0	Ī	13	,
	П	Q	0	П	14	
	П	Ð	0	П	23	
		Ð	0	Π	24	1
		Ð	0		33	_
		()	0		34	
		0	0		41	-
	П	Ð	0	Ī	42	Г

Terminal	Function
A1	+24 V DC
A2	0 V
S1 to S4	Light curtain control output (OSSD) input terminal
AUX	Semiconductor auxiliary output
X1	Reset output terminal
X2	Reset input terminal (Manual)
X3	Reset input terminal (Automatic)
13-14, 23-24, 33-34	Enabling path (NO contact × 3)
41-42	Auxiliary output (NC contact × 1)

A terminal block is required for wiring of light curtain side.

For NPN output (plus ground)

 Connect the light curtain control outputs OSSD 1 and OSSD 2 to S4 and S2 respectively and ground the + side.

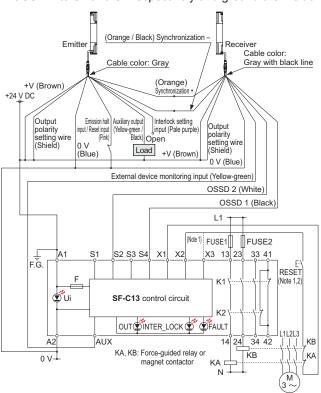

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.

2) Use a momentary-type switch as the reset (RESET) button.

When **SF-C13** is connected to the light curtain, be sure to use the following descrete wire mating cable. **SFB-CC**□(-MU), **SFB-CC**□(-MU)

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

UGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

SENSORS

STATIC
ELECTRICITY
PREVENTION
DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components

Optical Touch Switch

Control Units

Definition of Sensing Heights

SF4B-C SF4C

SF2C

SF2B

LASER SENSORS PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

CURTAINS/ SAFETY COMPONENTS PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

PARTICULAR

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch

SF4B-C SF4C SF2C

Sensing Heights

SF4B SF2B BSF4-AH80


I/O CIRCUIT AND WIRING DIAGRAMS

SF-C14EX(-01)

SF4B series wiring diagram (Control Category 4)

For PNP output (minus ground)

• Set the output polarity selection switch to the PNP side and ground the 0 V line.

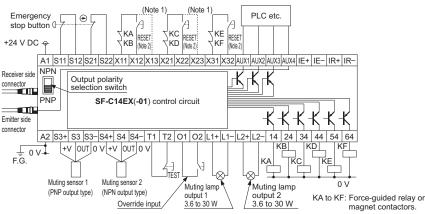

- When SF-C14EX is connected to the light curtain, be sure to use the following mating cable.
 SFB-CB□-EX, SFB-CCJ10□
- If the NO (Normally Open) contact switch is used as a muting sensor, wire it as shown in the figure below.




 If the emergency stop button is not used, short-circuit between the terminals S11 to S12 and S21 to S22 directly.

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X12 and connect it to X13, and disconnect the lead from X22 and connect it to X23, as shown by the dotted lines. In this case, a reset (RESET) button is not needed. Terminals X31 to X32 are for manual reset only.

2) Use a momentary-type switch for the reset (RESET) button.

For NPN output (plus ground)

· Set the output polarity selection switch to the NPN side and ground the side of the power supply input.

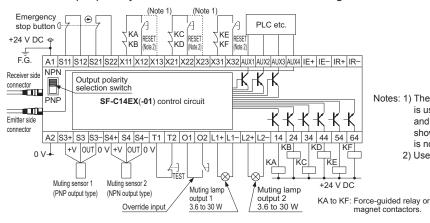


Function

A2 0 V

- Notes: 1) The left diagram is when using manual reset. If automatic reset is used, disconnect the lead from X12 and connect it to X13, and disconnect the lead from X22 and connect it to X23, as shown by the dotted lines. In this case, a reset (RESET) button is not needed. Terminals X31 to X32 are for manual reset only.
 - 2) Use a momentary-type switch for the reset (RESET) button.

Terminal arrangement diagram

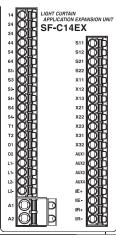

I CIIIIIIai	1 unction	TCITIIIIai	1 diletion				
14	Enabling path 1, Beam received / Beam	S11	Emergency stop				
24	interrupted output of the light curtain	S12	contact input 2 NC input Between S11 and S12				
34	Enabling path 2, light curtain output	S21					
44	including the muting function	S22	Between S21 and S2				
54	Enabling path 3	X11	Enabling path 1 reset inpu				
64	Emergency stop output	X12	X11 - X12: Manual reset				
S3+	Muting sensor input 1	X13	X11 - X13: Automatic reset				
S3	(PNP output type) S3+, S3–: Power supply	X21	Enabling path 2 reset input				
S3-	S3: Sensor output	X22	X21 - X22: Manual reset				
S4+	Muting sensor input 2	X23	X21 - X23: Automatic rese				
S4	(NPN output type) S4+, S4-: Power supply	X31	Enabling path 3 reset inpu X31 - X32: Manual rese				
S4-	S4: Sensor output	X32					
T1	Test input terminal Open: Test mode	AUX1	Auxiliary output 1, Muting output				
T2	Short-circuit: Normal operation	AUX2	Auxiliary output 2, Override output				
01	Override input terminal Open: Invalid	AUX3	Auxiliary output 3, Blown lamp output				
02	Short-circuit: Valid	AUX4	Auxiliary output 4, Light curtain auxiliary output				
L1+	Muting lamp	IE+	Interference prevention terminal, Emitter side +				
L1-	output 1	IE-	Interference prevention terminal, Emitter side –				
L2+	Muting lamp	IR+	Interference prevention terminal, Receiver side +				
L2-	output 2	IR-	Interference prevention terminal, Receiver side –				
A1	+24 V DC						

Terminal

Function

Pin layout for light curtain connectors



Connector pin No.	Emitter side connector	Receiver side connector
1	Interference prevention wire +	Interference prevention wire +
2	+24 V DC	+24 V DC
3	Interference prevention wire –	Interference prevention wire –
4	Auxiliary output	Not used
5	Synchronization wire +	Synchronization wire +
6	Synchronization wire –	Synchronization wire –
7	0 V	0 V
8	Shield wire	Shield wire

PRECAUTIONS FOR PROPER USE

The instruction manual can be downloaded from our website.

Interlock function

• The selection of manual reset / automatic reset is available by applying the interlock input wiring. The interlock becomes available by selecting manual reset. (Refer to the SF4B<V2> manual for details.)

Emission halt function

- This function stops the emission process of the emitter. You can select whether emission is on or halted by means of the connection status for the emission halt input / reset input wire (pink).
- · During emission halt, the control outputs (OSSD 1, OSSD 2) become OFF status.
- · By using this function, malfunction due to extraneous noise or abnormality in the control outputs (OSSD 1, OSSD 2) and the auxiliary output can be determined even from the machinery side.
- Normal operation is restored when the emission halt input / reset input wire (pink) is connected to 0 V or +V. (Refer to the SF4B<V2> manual for details.)

Auxiliary output (Non-safety output)

 This light curtain incorporates the auxiliary output (yellowgreen / black) for the non-safety output. The auxiliary output is incorporated with the emitter. (Refer to the SF4B<V2> manual for details.)

External device monitoring function

· This is the function for checking whether the external safety relay connected to the control outputs (OSSD 1, OSSD 2) perform normally in accordance with the control outputs (OSSD 1, OSSD 2) or not. Monitor the contacting point "b" of the external safety relay, and if any abnormality such as deposit of the contacting point, etc. is detected, change the status of the light curtain into lockout one, and turn OFF the control outputs (OSSD 1, OSSD 2). (Refer to the SF4B<V2> manual for details.)

Muting function

- This function turns the safety function of this light curtain into disabled temporarily. When the control outputs (OSSD 1, OSSD 2) are ON, this function is available for passing the workpiece through the sensing area of the light curtain without stopping the machinery. The muting function becomes valid when all the conditions listed below are satisfied. However, this function connot be used with the SF4B---03<V2>
 - 1) The control outputs (OSSD 1, OSSD 2) shall be ON.
- 2) The incandescent lamp with 3 to 10 W shall be connected to the muting lamp output (red).
- 3 The output of the muting sensors A and B shall be changed from OFF (open) to ON. At this time, the time difference occurred by changing the output of the muting sensors A and B into ON status shall be within 0.03 to 3 sec.
- · The following devices, photoelectric sensor with semiconductor output, inductive proximity sensor, position switch on N.O. (Normally open) contact, etc. are available for applying to the muting sensor.
- In case of using the muting function, please order 12-core

(Refer to the SF4B<V2> manual for details.)

Override function

 This function sets the safety function of this light curtain enabled forcibly. When using the muting function, the override function can be used to start the machinery at times such as when the control outputs (OSSD 1 and OSSD 2) are OFF or when the muting sensors are ON when the line is to be started.

The override function becomes valid when all the conditions listed below are satisfied.

However, this function cannot be used with the SF4B--03<V2>.

(Refer to the SF4B<V2> manual for details.)

Series connection

Connectable up to 3 sets of light curtains (however, 192 beam channels max.) (Refer to the SF4B<V2> manual for details.)

Parallel connection

Connectable up to 3 sets of light cartains (Refer to the SF4B<V2> manual for details.)

Series and parallel mixed connection

Connectable up to 3 sets of light curtains (however, 192 beam channels max.) (Refer to the SF4B<V2> manual for details.)

Wiring



Refer to the applicable regulations for the region where this device is to be used when setting up the device. In addition, make sure that all necessary measures are taken to prevent possible dangerous operating errors resulting from earth faults.

- · Make sure to carry out the wiring in the power supply off condition.
- · Verify that the supply voltage variation is within the rating.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this sensor, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- · Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.

Others

- · Do not use during the initial transient time (2 sec.) after the power supply is switched on.
- · Avoid dust, dirt and steam.
- Take care that the light curtain does not come in direct contact with water, oil, grease, or organic solvents, such as, thinner, etc.
- · Take care that the light curtain is not directly exposed to fluorescent light from a rapid-starter lamp or a high frequency lighting device, as it may affect the sensing performance.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS MEASURE-

MENT SENSORS

DEVICES LASER MARKERS

PLC HUMAN

MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Safety

Control Units

SF4B-C SF4C

SF2C

SF2B

LASER SENSORS

PHOTO-MICRO

AREA SENSORS

PRESSURE

SENSORS

PARTICULAR

SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION

DEVICES LASER MARKERS

HUMAN MACHINE INTERFACES

PLC

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

COMPONENTS

MACHINE VISION SYSTEMS

Ligh:

Control

Sensing Heights

SF4B-C

SF4C

SF2C

SF4B

SF2B

BSF4-AH80

CURING SYSTEMS

PRECAUTIONS FOR PROPER USE

The instruction manual can be downloaded from our website.

· When this device is used in the "PSDI mode", an appropriate control circuit must be configured between this device and the machinery. For details, be sure to refer to the standards or regulations applicable in each

- region or country. To use this product in the U.S.A., refer to OSHA 1910. 212 and OSHA 1910. 217 for installation, and in Europe, refer to EN 999 as well. Observe your national and local requirements before installing this product.
- This catalog is a guide to select a suitable product. Be sure to read instruction manual attached to the product prior to its use.
- Both emitter and receiver are combined adjusted on factory setting, please apply both emitter and receiver with the same serial No. The serial No. is indicated on the plates of both emitter and receiver. (Indicated under model No.)
- Make sure to carry out the test run before regular operation.
- · This safety system is for use only on machinery in which the dangerous parts can be stopped immediately, either by an emergency stop unit or by disconnecting the power supply. Do not use this system with machinery which cannot be stopped at any point in its operation cycle.


Sensing area




· Make sure to install this product such that any part of the human body must pass through its sensing area in order to reach the dangerous parts of the machinery. If the human body is not detected, there is a danger of serious injury or death.


- Do not use any reflective type or retroreflective type arrangement.
- · Furthermore, facing several receivers towards one emitter, or vice versa, could produce a non-sensing area or cause mutual interference, which may result in serious injury or death.


Correct mounting method

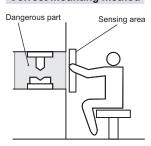

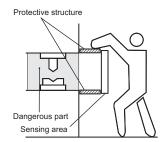

Wrong mounting method

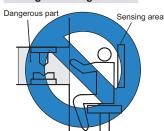

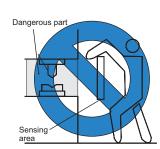


Safety distance

· Calculate the safety distance correctly, and always maintain a distance which is equal to or greater than the safety distance, between the sensing area of this light curtain and the dangerous parts of the machinery. (Please check the latest standards for the equation.) If the safety distance is miscalculated or if sufficient distance is not maintained, there is a danger of serious injury or death.



Before designing the system, refer to the relevant standards of the region where this device is to be used and then install this device. Also, the below calculation is valid only when the intrusion direction is perpendicular to the sensing area. In case the intrusion direction is not perpendicular to the sensing area, be sure to refer to the relevant standard (regional standard, specification of the machine, etc.) for details of the calculation.

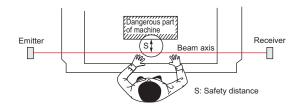



The sizes of the minimum sensing objects for this device vary depending on whether or not the floating blanking function is being used. Calculate the safety distance with the proper size of the minimum sensing object and appropriate equation.

Size of minimum sensing object when applying floating blanking function

	Min. sensing object when applying floating blanking function					
	Invalid	Setting (Note)				
	IIIvaliu	1 beam channel	2 beam channels	3 beam channels		
SF4B-F¤(G) (Min. sensing object ø14 mm ø0.551 in)	ø14 mm ø0.551 in	ø24 mm ø0.945 in	ø34 mm ø1.339 in	ø44 mm ø1.732 in		
SF4B-Ha(G) (Min. sensing object ø25 mm ø0.984 in)	ø25 mm ø0.984 in	ø45 mm ø1.772 in	ø65 mm ø2.559 in	ø85 mm ø3.346 in		
SF4B-Aa(G) (Min. sensing object ø45 mm ø1.772 in)	ø45 mm ø1.772 in	ø85 mm ø3.346 in	ø125 mm ø4.921 in	ø165 mm ø6.496 in		

Note: Refer to p.571 for details of the floating blanking function. However, the floating blanking function cannot be used with the SF4B-u-01<V2>, the SF4B---03<V2> and SF-C14EX-01.

For use in Europe (EU) (as EN 999) (Also applicable to ISO 13855 / JIS B 9715)

For intrusion direction perpendicular to the sensing area <In case that the minimum sensing object is ø40 mm ø1.575 in or less>

- $S = K \times T + C$ Equation ①
- S: Safety distance (mm)
 - Minimum required distance between the sensing area surface and the dangerous parts of the machine
- K: Intrusion velocity of operator's body or object (mm/sec.) Normally taken as 2,000 (mm/sec.) for calculation
- T: Response time of total equipment (sec.) $T = T_m + T_{SF4B}$
 - T_m: Maximum halting time of machinery (sec.) Tsf4B: Response time of the **SF4B<V2>** series (sec.)
- C: Additional distance calculated from the size of the minimum sensing object of the light curtain (mm) However, the value of "C" cannot be less than 0. $C = 8 \times (d - 14)$
 - d: Minimum sensing object diameter (mm)

PRECAUTIONS FOR PROPER USE

The instruction manual can be downloaded from our website.

• For calculating the safety distance "S", there are the following five cases.

First calculate by substituting the value K = 2,000 (mm/sec.) in the equation above. Then, classify the obtained value of "S" into three cases, 1) S < 100, 2) $100 \le S \le 500$, and 3) S > 500. For Case 3) S > 500, recalculate by substituting the value K = 1,600 (mm/sec.). After that, classify the calculation result into two cases, 4) S \le 500 and 5) S > 500. For details, refer to the instruction manual enclosed with this product. For calculating "Tm" (maximum halt time of the machinery), use a special device called a "brake monitor".

When this device is used in the "PSDI mode", an appropriate safety distance "S" must be calculated. For details, be sure to refer to the standards or regulations applicable in each region or country.

<In the case that the minimum sensing object is Ø40 mm Ø1.575 in or more>

• Equation $S = K \times T + C$

S: Safety distance (mm)

K: Intrusion velocity of operator's body or object (mm/sec.) Taken as 1,600 (mm/sec.) for calculation

T: Response time of total equipment (sec.)

 $T = T_m + T_{SF4B}$

T_m: Maximum halting time of machinery (sec.)
TSF4B: Response time of the **SF4B<V2>** series (sec.)

C: Additional distance calculated from the size of the minimum sensing object of the light curtain (mm) C = 850 (mm) (Constant)

For use in the United States of America (as per ANSI B11.19)

Equation ② S = K× (T_S + T_C + T_{SF4B} + T_{bm}) + D_{pf}
 S: Safety distance (mm)

Minimum required distance between the sensing area surface and the dangerous parts of the machine

K: Intrusion velocity {Recommended value in OSHA is 63 (inch/sec.) ≈ 1,600 (mm/sec.)}

ANSI B11.19 does not define the intrusion velocity "K". When determining "K", consider possible factors including physical ability of operators.

Ts: Halting time calculated from the operation time of the control element (air valve, etc.) (sec.)

Tc: Maximum response time of the control circuit required for functioning the brake (sec.)

Tsf4B: Response time of light curtain (sec.)

T_{bm}: Additional halting time tolerance for the brake monitor (sec.)

The following equation holds when the machine is equipped with a brake monitor.

 $T_{bm} = T_a - (T_s + T_c)$

Ta: Setting time of brake monitor (sec.)

When the machine is not equipped with a brake monitor, it is recommended that 20 % or more of (Ts + Tc) is taken as additional halting time.

Dpf: Additional distance calculated from the size of the minimum sensing of the

SF4B-F \square (**G**)<**V2**>: D_{pf} = 23.8 mm 0.937 in **SF4B-H** \square (**G** \square)<**V2**>: D_{pf} = 61.2 mm 2.409 in **SF4B-A** \square (**G**)<**V2**>: D_{pf} = 129.2 mm 5.087 in

Dpf = $3.4 \times (d - 0.276)$ (inch) $\approx 3.4 \times (d - 7)$ (mm)

d: Minimum sensing object diameter 0.552 (inch) ≈ 14 (mm) SF4B-F□(G)<V2> Minimum sensing object diameter 0.985 (inch) ≈ 25 (mm) SF4B-H□(G□)<V2> Minimum sensing object diameter 1.772 (inch) ≈ 45 (mm) SF4B-A□(G)<V2>


Handy-controller

This device enables to set each function using the handy-controller SFB-HC (optional). (However, a handy-controller cannot be used with the SF4B-□-01<V2>, the SF4B-□-03<V2> and the SF-C14EX-01.) Among the functions, the contents related to the safety distance such as the size of the minimum sensing object and response time are varied depending on the setting condition. When setting each function, re-calculate the safety distance, and make enough space larger than the calculated safety distance. Failure to do so might cause the accident that the device cannot stop quickly before reaching the dangerous area of the machinery, resulting in the serious injury or

 Refer to the instruction manual enclosed with the handy-controller for details of the function settings for using handy-controller SFB-HC (optional).

Corner mirror

- Be sure to carry out maintenance while referring to the instruction manual for the SF4B series of light curtains.
- Do not use if dirt, water, or oil, etc. is attached to the reflective surface of this product. Appropriate sensing range may not be maintained due to diffusion or refraction.
- Make sure that you have read the instruction manual for the corner mirror thoroughly before setting up the corner mirrors and light curtains, and follow the instructions given. If the equipment is not set up correctly as stipulated in the instruction manual, incident light errors may result in unexpected situations which may result in serious injury or death.
- Please download the instruction manuals from our website.

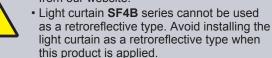

- The mirror part of this product is made of glass. Note that if it is broken, the glass shards may fly apart.
- Do not use if crack or breakage appears on the reflective surface of this product. Proper sensing range may not be maintained due to diffusion or refraction.

If crack or breakage appears on the reflective surface of this product, replace the product.

- When adjusting beam channels with a laser alignment tool, etc., take sufficient care that the laser beam reflected by this product does not enter the eyes.
- Failure to follow the above items may result in death or serious injury.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

> CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR

SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

> LASER MARKERS

PLC

MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Selection Guide Light Curtains

Safety Components Optical Touch Switch Control Units

SF4B-C

SF4C SF2C

SF4B SF2B

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

> AREA SENSORS

LIGHT
CURTAINS,
SAFETY
COMPONENTS

PRESSURE /
FLOW
SENSORS

INDUCTIVE
PROXIMITY
SENSORS

PARTICULAR
USE
SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC

HUMAN
MACHINE
INTERFACES
ENERGY
CONSUMPTION
VISUALIZATION
COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

SF4B-□<V2> Not

Not available for the robust type **SF4B-□G□<V2>** Light curtain

Assembly dimensions

Mounting drawing for the light curtains using the standard mounting brackets **MS-SFB-1** (optional) and the intermediate supporting brackets.

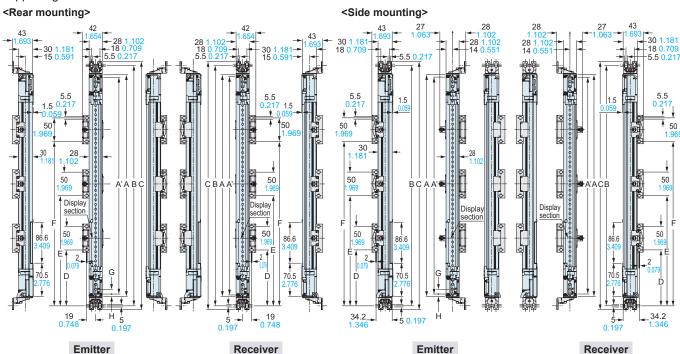

							,			
Model No.			Pro	tective he	ight	Mounting pitch	Total length	Intermediate supporting bracket mounting pitch		
				A' (N	lote)					
Wodel NO.		А	SF4B-F=01 <v2> SF4B-H=01<v2></v2></v2>	SF4B-A::-01 <v2></v2>	В	С	D	E	F	
SF4B-F23 _{II} <v2></v2>	SF4B-H12□ <v2></v2>	SF4B-A6□ <v2></v2>	230 9.055	220 8.661	200 7.874	270 10.630	286 11.260	_	_	_
SF4B-F31 ₀ <v2></v2>	SF4B-H16□ <v2></v2>	SF4B-A8 _□ <v2></v2>	310 12.205	300 11.811	280 11.024	350 13.780	366 14.406			
SF4B-F39□ <v2></v2>	SF4B-H20□ <v2></v2>	SF4B-A10□ <v2></v2>	390 15.354	380 14.960	360 14.173	430 16.929	446 17.559	_	_	
SF4B-F47 ₀ <v2></v2>	SF4B-H24 _{II} <v2></v2>	SF4B-A12a <v2></v2>	470 18.504	460 18.110	440 17.323	510 20.079	526 20.709	_		
SF4B-F550 <v2></v2>	SF4B-H28□ <v2></v2>	SF4B-A14a <v2></v2>	550 21.654	540 21.260	520 20.472	590 23.228	606 23.858	_		
SF4B-F63□ <v2></v2>	SF4B-H32□ <v2></v2>	SF4B-A16a <v2></v2>	630 24.803	620 24.409	600 23.622	670 26.378	686 27.008	_		
SF4B-F71 ₀ <v2></v2>	SF4B-H36□ <v2></v2>	SF4B-A18□ <v2></v2>	710 27.953	700 27.559	680 26.772	750 29.528	766 30.157			
SF4B-F79□ <v2></v2>	SF4B-H40□ <v2></v2>	SF4B-A20□ <v2></v2>	790 31.102	780 30.708	760 29.921	830 32.677	846 33.307	390 15.354		
SF4B-F950 <v2></v2>	SF4B-H48□ <v2></v2>	SF4B-A240 <v2></v2>	950 37.402	940 37.007	920 36.220	990 38.976	1,006 39.606	470 18.504		
SF4B-F1110 <v2></v2>	SF4B-H56□ <v2></v2>	SF4B-A28= <v2></v2>	1,110 43.701	1,100 43.701	1,080 42.520	1,150 45.276	1,166 45.905	550 21.654	_	
SF4B-F127 _{II} <v2></v2>	SF4B-H64□ <v2></v2>	SF4B-A32a <v2></v2>	1,270 50.000	1,260 49.606	1,240 48.819	1,310 51.575	1,326 52.505	418 16.457	842 33.150	
	SF4B-H72□ <v2></v2>	SF4B-A36□ <v2></v2>	1,430 56.299	1,420 55.905	1,400 55.118	1,470 57.874	1,486 58.504	472 18.583	948 37.323	
	SF4B-H80□ <v2></v2>	SF4B-A40□ <v2></v2>	1,590 62.598	1,580 62.205	1,560 61.417	1,630 64.173	1,646 64.803	525 20.669	1,055 41.535	
	SF4B-H88□ <v2></v2>	SF4B-A44□ <v2></v2>	1,750 68.898	1,740 68.504	1,720 67.716	1,790 70.472	1,806 71.102	433 17.047	870 34.252	1,308 51.496
	SF4B-H96□ <v2></v2>	SF4B-A48□ <v2></v2>	1,910 75,197	1,900 74,803	1,880 74,016	1,950 76,772	1,966 77,401	473 18.622	950 37,402	1,428 56,220

	Beam pitch	First beam channel position		
Model No.	G	Н		
SF4B-F□ <v2></v2>	10 0.394	5 0.197		
SF4B-H□ <v2></v2>	20 0.787	5 0.197		
SF4B-A□ <v2></v2>	40 1.575	15 0.591		

Note: When **SF4B-**□**-01<V2>** is used for China press machine as a safety device, the distance between the center of the 1st beam axis and the center of the last beam axis is regarded as protective height A'.

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

SF4B-□<V2>

Not available for the robust type **SF4B-**□**G**□**<V2>** Light curtain

Assembly dimensions

Mounting drawing for the light curtains using the dead zoneless mounting brackets **MS-SFB-3** (optional) and the intermediate supporting brackets.

Rear mounting

**Side mounti

Emitter Emitter Emitter

			Due	taati .a ba	: aula 4	MS-SFB-3 Mounting pitch		Intermediate supporting bracket mounting pitch		
			Pio	tective he	ignt					
	Model No.			A' (N	lote)					
		А	SF4B-F=01 <v2> SF4B-H=01<v2></v2></v2>	SF4B-A::-01 <v2></v2>	J	К	L	M	N	
SF4B-F230 <v2></v2>	SF4B-H12 _□ <v2></v2>	SF4B-A6= <v2></v2>	230 9.055	220 8.661	200 7.874	209 8.228	201 7.913	_	_	_
SF4B-F31□ <v2></v2>	SF4B-H16 _□ <v2></v2>	SF4B-A8 _{II} <v2></v2>	310 12.205	300 11.811	280 11.024	289 11.378	281 11.063	_		
SF4B-F39□ <v2></v2>	SF4B-H20 _{II} <v2></v2>	SF4B-A10= <v2></v2>	390 15.354	380 14.960	360 14.173	369 14.528	361 14.213	_		
SF4B-F47□ <v2></v2>	SF4B-H24 _{II} <v2></v2>	SF4B-A12= <v2></v2>	470 18.504	460 18.110	440 17.323	449 17.677	441 17.362	_	_	
SF4B-F55□ <v2></v2>	SF4B-H28□ <v2></v2>	SF4B-A14 _□ <v2></v2>	550 21.654	540 21.260	520 20.472	529 20.827	521 20.512	_		
SF4B-F63□ <v2></v2>	SF4B-H32□ <v2></v2>	SF4B-A16□ <v2></v2>	630 24.803	620 24.409	600 23.622	609 23.976	601 23.661	_		
SF4B-F71 (V2>	SF4B-H36□ <v2></v2>	SF4B-A18= <v2></v2>	710 27.953	700 27.559	680 26.772	689 27.126	681 26.811	_		
SF4B-F79@ <v2></v2>	SF4B-H40□ <v2></v2>	SF4B-A20= <v2></v2>	790 31.102	780 30.708	760 29.921	769 30.276	761 29.961	370 14.567		
SF4B-F95□ <v2></v2>	SF4B-H48□ <v2></v2>	SF4B-A240 <v2></v2>	950 37.402	940 37.007	920 36.220	929 36.575	921 36.260	450 17.717		
SF4B-F111□ <v2></v2>	SF4B-H56□ <v2></v2>	SF4B-A28□ <v2></v2>	1,110 43.701	1,100 43.701	1,080 42.520	1,089 42.874	1,081 42.559	530 20.866		<u> </u>
SF4B-F127□ <v2></v2>	SF4B-H64□ <v2></v2>	SF4B-A32□ <v2></v2>	1,270 50.000	1,260 49.606	1,240 48.819	1,249 49.173	1,241 48.858	398 15.669	822 32.362	
	SF4B-H72□ <v2></v2>	SF4B-A36□ <v2></v2>	1,430 56.299	1,420 55.905	1,400 55.118	1,409 55.472	1,401 55.157	452 17.795	928 36.535	
	SF4B-H80□ <v2></v2>	SF4B-A40= <v2></v2>	1,590 62.598	1,580 62.205	1,560 61.417	1,569 61.772	1,561 61.457	505 19.882	1,035 40.748	
_	SF4B-H88□ <v2></v2>	SF4B-A44¤ <v2></v2>	1,750 68.898	1,740 68.504	1,720 67.716	1,729 68.071	1,721 67.756	413 16.260	850 33.465	1,288 50.709
	SF4B-H96□ <v2></v2>	SF4B-A48□ <v2></v2>	1,910 75.197	1,900 74.803	1,880 74.016	1,889 74.370	1,881 74.055	453 17.835	930 36.614	1,408 55.433

	Beam pitch	First beam channel position		
Model No.	G	Н		
SF4B-F _□ <v2></v2>	10 0.394	5 0.197		
SF4B-H□ <v2></v2>	20 0.787	5 0.197		
SF4B-A□ <v2></v2>	40 1.575	15 0.591		

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS STATIC FLECTRICITY

LASER MARKERS

PLC

HUMAN
HACHINE
NTERFACES
NERGY
ONSUMPTION
ISUALIZATION
OMPONENTS

MACHINE VISION SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units

SF4B-C SF4C SF2C

SF2B BSF4-AH80

Note: When SF4B- \neg -01<V2> is used for China press machine as a safety device, the distance between the center of the 1st beam axis and the center of the last beam axis is regarded as protective height A'.

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS

MEASURE-MENT SENSORS LASER MARKERS

PLC HUMAN

FA COMPONENTS MACHINE VISION SYSTEMS CURING SYSTEMS

Definition of Sensing Heights

SF4C SF2C SF4B SF2B BSF4-AH80

SF4B-C

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

SF4B-GG<V2>


It is only available for the robust type **SF4B-**□**G**□**<V2>** Light curtain

Assembly dimensions

Mounting drawing for light curtains using the standard mounting brackets MS-SF4BG-1 (optional) and the intermediate supporting brackets.

<Rear mounting>

<Side mounting>

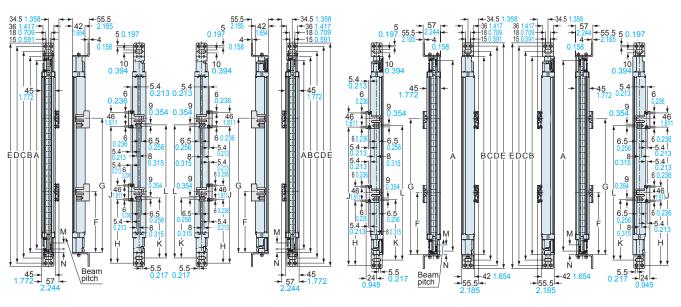

Receiver Emitter Receiver Emitter

Model No.		Pro	tective height	t	Mounting Total Intermediate supporting pitch length bracket mounting pitch									
		A (N	Note)											
		SF4B-F G <v2> SF4B-H G G SF4B-H</v2>	SF4B-A□G <v2></v2>	В	С	D	E	F	G	Н	J	K	L	
SF4B-F23G <v2></v2>	SF4B-H12G:: <v2></v2>	SF4B-A6G <v2></v2>	220 8.661	200 7.874	244 9.606	279 10.984	313 12.323	334 13.150	_	_	_	_	_	
SF4B-F31G <v2></v2>	SF4B-H16G= <v2></v2>	SF4B-A8G <v2></v2>	300 11.811	280 11.024	324 12.756	359 14.134	393 15.472	414 16.299				_		
SF4B-F39G <v2></v2>	SF4B-H20G:: <v2></v2>	SF4B-A10G <v2></v2>	380 14.961	360 14.173	404 15.906	439 17.283	473 18.622	494 19.449				_		
SF4B-F47G <v2></v2>	SF4B-H24G□ <v2></v2>	SF4B-A12G <v2></v2>	460 18.110	440 17.323	484 19.055	519 20.433	553 21.772	574 22.598				_		
SF4B-F55G <v2></v2>	SF4B-H28G:: <v2></v2>	SF4B-A14G <v2></v2>	540 21.260	520 20.472	564 22.205	599 23.583	633 24.921	654 25.748			_	_		_
SF4B-F63G <v2></v2>	SF4B-H32G= <v2></v2>	SF4B-A16G <v2></v2>	620 24.409	600 23.622	644 25.354	679 26.732	713 28.071	734 28.898			_	_		
SF4B-F71G <v2></v2>	SF4B-H36G□ <v2></v2>	SF4B-A18G <v2></v2>	700 27.559	680 26.772	724 28.504	759 29.882	793 31.220	814 32.047						
SF4B-F79G <v2></v2>	SF4B-H40G= <v2></v2>	SF4B-A20G <v2></v2>	780 30.709	760 29.921	804 31.654	839 33.031	873 34.370	894 35.197	441 17.362		414 16.299		419 16.496	_
SF4B-F95G <v2></v2>	SF4B-H48G= <v2></v2>	SF4B-A24G <v2></v2>	940 37.008	920 36.220	964 37.953	999 39.331	1,033 40.669	1,054 41.496	521 20.512		494 19.449		499 19.646	_
SF4B-F111G <v2></v2>	SF4B-H56G□ <v2></v2>	SF4B-A28G <v2></v2>	1,100 43.307	1,080 42.520	1,124 44.252	1,159 45.630	1,193 46.968	1,214 47.795	601 23.661		574 22.598		579 22.795	_
SF4B-F127G <v2></v2>	SF4B-H64G□ <v2></v2>	SF4B-A32G <v2></v2>	1,260 49.606	1,240 48.819	1,284 50.551	1,319 51.929	1,353 53.268	1,374 54.094	681 26.811	_	654 25.748		659 25.945	
	SF4B-H72G□ <v2></v2>	SF4B-A36G <v2></v2>	1,420 55.905	1,400 55.118	1,444 56.850	1,479 58.228	1,513 59.567	1,534 60.394	520 20.472	1,001 39.409	493 19.409	974 38.346	498 19.606	979 38.543
	SF4B-H80G:: <v2></v2>	SF4B-A40G <v2></v2>	1,580 62.205	1,560 61.417	1,604 63.150	1,639 64.528	1,673 65.866	1,694 66.693	573 22.559	1,108 43.622	546 21.496	1,081 42.559	551 21.693	1,086 42.756
	SF4B-H88G= <v2></v2>	SF4B-A44G <v2></v2>	1,740 68.504	1,720 67.716	1,764 69.449	1,799 70.827	1,833 72.165	1,854 72.992	627 24.685	1,215 47.835	600 23.622	1,188 46.772	605 23.819	1,193 46.968
	SF4B-H96G:: <v2></v2>	SF4B-A48G <v2></v2>	1,900 74.803	1,880 74.016	1,924 75.748	1,959 77.126	1,993 78.464	2,014 79.291	680 26.772	1,321 52.008	653 25.709	1,294 50.945	658 25.906	1,289 50.748

Model No.	Beam pitch	First beam channel position				
	M	N				
SF4B-F□G <v2></v2>	10 0.394	11.8 0.465				
SF4B-H□G□ <v2></v2>	20 0.787	11.8 0.465				
SF4B-A□G <v2></v2>	40 1.575	21.8 0.858				

Note: When $\mathbf{SF4B} - \mathbf{G} - \mathbf{V2}$ is used for China press machine as a safety device, the distance between the center of the 1st beam axis and the center of the last beam axis is regarded as protective height described in column A.

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

SF4B-GG<V2>

It is only available for the robust type **SF4B-**□**G**□**<V2>** Light curtain

urtain SEN

Assembly dimensions

Mounting drawing for light curtains using the Dead zoneless mounting brackets **MS-SF4BG-3** (optional) and the intermediate supporting brackets.

Emitter Emitter Receiver

Model No.		Pro	tective he	ight	Mounting pitch							ediate								
		A (N	lote)																	
		SF4B-F::G <v2> SF4B-H::G::<v2></v2></v2>	SF4B-A::G <v2></v2>	В	С	D	Е	F	G	Н	J	М	N	Р	Q	R	S	Т	U	
SF4B-F23G <v2></v2>	SF4B-H12G□ <v2></v2>	SF4B-A6G <v2></v2>	220 8.661	200 7.874	244 9.606	64.5 2.539	_	_	_	_	_	_	-	_	-	_	_	_	_	-
SF4B-F31G <v2></v2>	SF4B-H16G□ <v2></v2>	SF4B-A8G <v2></v2>	300 11.811	280 11.024	324 12.756	144.5 5.689	_	_	_	_	_	_	_	_	_	_	_	_	_	
SF4B-F39G <v2></v2>	SF4B-H20G□ <v2></v2>	SF4B-A10G <v2></v2>	380 14.961	360 14.173	404 15.906	224.5 8.839	_	_	_	_	_	_	-	_	_	_	_	_	_	_
SF4B-F47G <v2></v2>	SF4B-H24G□ <v2></v2>	SF4B-A12G <v2></v2>	460 18.110	440 17.323	484 19.055	304.5 11.988	_	_	_	_	_	_	-	_	-	_	_	_	_	_
SF4B-F55G <v2></v2>	SF4B-H28G□ <v2></v2>	SF4B-A14G <v2></v2>	540 21.260	520 20.472	564 22.205	384.5 15.138	_	_	_	_	_	_	_	_	_	_	_	_	_	_
SF4B-F63G <v2></v2>	SF4B-H32G□ <v2></v2>	SF4B-A16G <v2></v2>	620 24.409	600 23.622	644 25.354	464.5 18.287	_	_	_	_	_	_	_	_	_	_	_	_	_	_
SF4B-F71G <v2></v2>	SF4B-H36G□ <v2></v2>	SF4B-A18G <v2></v2>	700 27.559	680 26.772	724 28.504	544.5 21.437	_	-	_	_	_	_	_	_	-	_	_	_	_	_
SF4B-F79G <v2></v2>	SF4B-H40G□ <v2></v2>	SF4B-A20G <v2></v2>	780 30.709	760 29.921	804 31.654	624.5 24.587	414 16.299	_	333 13.110	_	288 11.339	_	289 11.378	_	330 12.992	_	383 15.079	_	347 13.661	-
SF4B-F95G <v2></v2>	SF4B-H48G□ <v2></v2>	SF4B-A24G <v2></v2>	940 37.008	920 36.220	964 37.953	784.5 30.886	494 19.449	_	413 16.260	_	368 14.488	_	369 14.528	_	410 16.142	_	463 18.228	_	427 16.811	_
SF4B-F111G <v2></v2>	SF4B-H56G□ <v2></v2>	SF4B-A28G <v2></v2>	1,100 43.307	1,080 42.520	1,124 44.252	944.5 37.185	574 22.598	_	493 19.409	_	448 17.638	_	449 17.677	_	490 19.291	_	543 21.378	_	507 19.961	_
SF4B-F127G <v2></v2>	SF4B-H64G□ <v2></v2>	SF4B-A32G <v2></v2>	1,260 49.606	1,240 48.819	1,284 50.551	1,104.5 43.484	654 25.748	_	573 22.559	_	528 20.787	_	529 20.827	_	570 22.441	_	623 24.528	_	587 23.110	_
	SF4B-H72G□ <v2></v2>	SF4B-A36G <v2></v2>	1,420 55.905	1,400 55.118	1,444 56.850	1,264.5 49.783	493 19.409	974 38.346	412 16.220	893 35.157	367 14.449	848 33.386	368 14.488	849 33.425	409 16.102	890 35.039	462 18.189	943 37.126	426 16.772	907 35.709
_	SF4B-H80G□ <v2></v2>	SF4B-A40G <v2></v2>	1,580 62.205	1,560 61.417	1,604 63.150	1,424.5 56.083	546 21.496	1,081 42.559	465 18.307	1,000 39.370	420 16.535	955 37.598	421 16.575	956 37.638	462 18.189	997 39.252	515 20.276	1,050 41.339	479 18.858	1,014 39.921
_	SF4B-H88G□ <v2></v2>	SF4B-A44G <v2></v2>	1,740 68.504	1,720 67.716	1,764 69.449	1,584.5 62.382	600 23.622	1,188 46.772	519 20.433	1,107 43.583	474 18.661	1,062 41.811	475 18.701	1,063 41.850	516 20.315	1,104 43.465	569 22.402	1,157 45.551	533 20.984	1,121 44.134
_	SF4B-H96G¬ <v2></v2>	SF4B-A48G <v2></v2>	1.900 74.803	1,880 74.016	1,924 75.748	1.744.5 68.681	653 25.709	1.294 50.945	572 22.520	1.213 47.756	527 20.748	1.168 45.984	528 20.787	1,169 46,024	569 22.402	1.210 47.638	622 24.488	1.263 49.724	586 23.071	1.227 48.307

Model No.	Beam pitch	First beam channel position				
	K	L				
SF4B-F□G <v2></v2>	10 0.394	11.8 0.465				
SF4B-H _□ G _□ <v2></v2>	20 0.787	11.8 0.465				
SF4B-A⊓G <v2></v2>	40 1.575	21.8 0.858				

Note: When SF4B-□G□<V2> is used for China press machine as a safety device, the distance between the center of the 1st beam axis and the center of the last beam axis is regarded as protective height described in column A.

IBER

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE VIRE-SAVING JNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of

SF4B-C SF4C SF2C

SF4B SF2B

LASER SENSORS PHOTO-ELECTRIC SENSORS

SF4B-□

MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

PRESSURE FLOW SENSORS PARTICULAR

SENSORS SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC HUMAN MACHINE INTERFACES

FA COMPONENTS MACHINE

VISION SYSTEMS CURING SYSTEMS

Control Definition of Sensing Heights


SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80


DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

Not available for the robust type **SF4B-□G□<V2>** Light curtain

Protection bar set MC-SFBH assembly dimensions

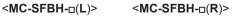

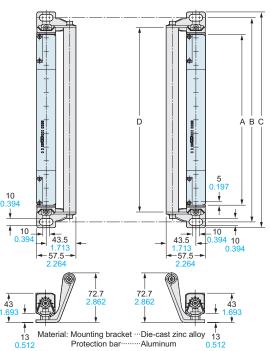


Two brackets (one pc. each of R type and L type), one protection bar Two pcs. each of M5 (length 16 mm 0.630 in)


hexagon-socket-head bolts, M5 (length 20 mm 0.787 in) hexagon-socket-head bolt are attached.

Model No.	Applicable	e light curtain i	model No.	Α	В	С	D
MC-SFBH-12(-T)	SF4B-F23□ <v2></v2>	SF4B-H12□ <v2></v2>	SF4B-A6□ <v2></v2>	230 9.055	279 10.984	296 11.654	250 9.843
MC-SFBH-16(-T)	SF4B-F31¤ <v2></v2>	SF4B-H16□ <v2></v2>	SF4B-A8□ <v2></v2>	310 12.205	359 14.134	376 14.803	330 12.992
MC-SFBH-20(-T)	SF4B-F39□ <v2></v2>	SF4B-H20□ <v2></v2>	SF4B-A10□ <v2></v2>	390 15.354	439 17.283	456 17.953	410 16.142
MC-SFBH-24(-T)	SF4B-F47 ₀ <v2></v2>	SF4B-H24□ <v2></v2>	SF4B-A12□ <v2></v2>	470 18.504	519 20.433	536 21.102	490 19.291
MC-SFBH-28(-T)	SF4B-F55□ <v2></v2>	SF4B-H28□ <v2></v2>	SF4B-A14□ <v2></v2>	550	599	616 24.252	570
MC-SFBH-32(-T)	SF4B-F63□ <v2></v2>	SF4B-H32□ <v2></v2>	SF4B-A16□ <v2></v2>	630	679	696 27.402	650
MC-SFBH-36(-T)	SF4B-F71□ <v2></v2>	SF4B-H36□ <v2></v2>	SF4B-A18□ <v2></v2>	710 27.953	759 29.882	776 30.551	730 28.740
MC-SFBH-40(-T)	SF4B-F79¤ <v2></v2>	SF4B-H40□ <v2></v2>	SF4B-A20□ <v2></v2>	790 31.102	839 33.031	856 33.701	810 31.890
MC-SFBH-48(-T)	SF4B-F95□ <v2></v2>	SF4B-H48□ <v2></v2>	SF4B-A24□ <v2></v2>	950 37.402	999 39.331	1,016 40.000	970 38.189
MC-SFBH-56(-T)	SF4B-F111□ <v2></v2>	SF4B-H56□ <v2></v2>	SF4B-A28□ <v2></v2>	1,110 43.701	1,159 45.630	1,176 46.299	1,130 44.488
MC-SFBH-64(-T)	SF4B-F127 _□ <v2></v2>	SF4B-H64□ <v2></v2>	SF4B-A32□ <v2></v2>	1,270 50.000	1,319 51.929	1,336 52.598	1,290 50.787
MC-SFBH-72(-T)		SF4B-H72□ <v2></v2>	SF4B-A36□ <v2></v2>	1,430 56.299	1,479 58.228	1,496 58.898	1,450 57.087
MC-SFBH-80(-T)		SF4B-H80□ <v2></v2>	SF4B-A40□ <v2></v2>	1,590 62.598	1,639 64.527	1,656 65.197	1,610 63.386
MC-SFBH-88(-T)		SF4B-H88□ <v2></v2>	SF4B-A44□ <v2></v2>	1,750 68.898	1,799 70.827	1,816 71.496	1,770 69.685
MC-SFBH-96(-T)		SF4B-H96□ <v2></v2>	SF4B-A48□ <v2></v2>	1,910 75.197	1,959 77.126	1,976 77.795	1,930 75.984

Protection bar set for rear / side mounting MC-SFBH-□-T assembly dimensions

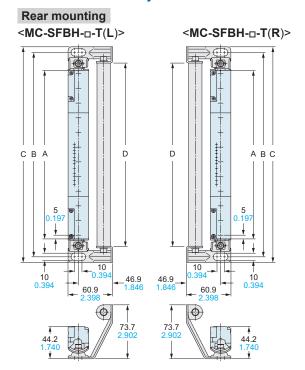

Side mounting

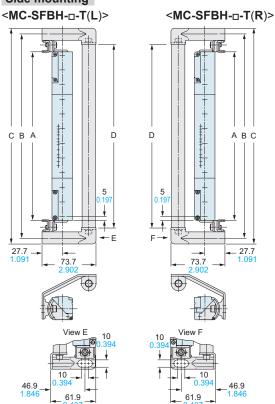

·Cold rolled carbon steel (SPCC) Material: Mounting bracket ··· (Trivalent chrome plated) Protection bar···· ···Aluminum


Two brackets (one pc. each of R type and L type), one protection bar

Two pcs. each of M5 (length 18 mm 0.709 in) hexagon-socket-head bolts, M5 (length 20 mm 0.787 in) hexagon-socket-head bolt are attached.

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

RF-SFBH-□ Corner mirror (Optional)

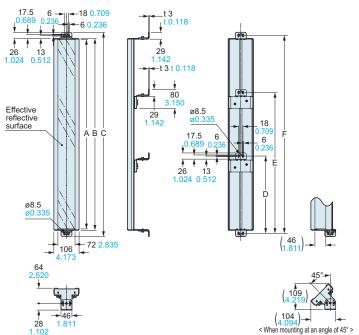

Model No.	Α	В	С	D	Е	F	Net weight
RF-SFBH-12	236 9.291	246 9.685	298 11.732	_	_	272 10.709	970 g approx.
RF-SFBH-16	316 12.441	326 12.835	378 14.882	_	_	352 13.858	1,170 g approx.
RF-SFBH-20	396 15.591	406 15.984	458 18.031	_	_	432 17.008	1,370 g approx.
RF-SFBH-24	476 18.740	486 19.134	538 21.181	_	_	512 20.157	1,570 g approx.
RF-SFBH-28	556 21.890	566 22.283	618 24.331	_	_	592 23.307	1,770 g approx.
RF-SFBH-32	636 25.039	646 25.433	698 27.480	_	_	672 26.457	1,970 g approx.
RF-SFBH-36	716 28.189	726 28.583	778 30.630	_	_	752 29.606	2,170 g approx.
RF-SFBH-40	796 31.339	806 31.732	858 33.779	458 ±50 18.031 ±1.969	_	832 32.756	2,660 g approx.
RF-SFBH-48	956 37.638	966 38.031		538 ±50 21.181 ±1.969	_	992 39.055	3,060 g approx.
RF-SFBH-56	1,116 43.937	1,126 44.331	1,178 46.378	618 ±50 24.331 ±1.969	_	1,152 45.354	3,460 g approx.
RF-SFBH-64	1,276 50.236	1,286 50.630	1,338 52.677	698 ±50 27.480 ±1.969	_	1,312 51.653	3,890 g approx.
RF-SFBH-72	1,436 56.535	1,446 56.929		538 ±50 21.181 ±1.969	1,018 ±50 40.079 ±1.969	1,472 57.953	4,550 g approx.
RF-SFBH-80		1,606 63.228		591 ±50 23.268 ±1.969	1,125 ±50 44.291 ±1.969	1,632 64.252	4,950 g approx.
RF-SFBH-88	1,756 69.134	1,766 69.527		645 ±50 25.394 ±1.969	1,231 ±50 48.464 ±1.969	1,792 70.551	5,350 g approx.
RF-SFBH-96	1,916 75.433	1,926 75.827	1,978 77.874	698 ±50 27.480 ±1.969	1,338 ±50 52.677 ±1.969	1,952 76.850	5,750 g approx.

MS-SFB-1 Standard mounting bracket (Optional) -8.4 0.331 R4.1 R0.161 (for sensor mounting) **2**0 24.5 4-R2.8 R0.110 5 0. 18 **-**-5.5 <mark>0.217</mark> 5.5 **0.217**→ R8.5 R0.335 M5 (length 60° M5 (length 14 0.551) R18.4 R0.72 R16.6 R0.6 8.7 / M5 Material: Die-cast zinc alloy Four bracket set Four M5 (length 18 mm 0.709 in) hexagon-socket-head bolts are attached.

It is only available for the robust type SF4B-□G□<V2>

MS-SFB-1-T M8 mounting bracket (Optional) **-**840331 33 10 28 R8.5 R0.335 M5 (length 6 0.236) 30 M5 (length 14 **0**. R18.4 8.7 R16.6 14 9.6 3 0.118 28 \ M5 Material: Die-cast zinc alloy Four bracket set Four M5 (length 18 mm 0.709 in) hexagon-socket-head bolts are attached.

It is only available for the robust type SF4B-□G□<V2>

MS-SFBG-1	Standard	L mounting bracket (Optional)	
34.5 17.358 17.3	7 36 1.417	Material ODGG	
55.5 2.185 ø9.8 Ø0.386 34.5 1.358	40°	Material: SPCC Four bracket set 90.984 Eight M5 (length: 10 mm 0.394 in) hexagon-socket-head bolts are attached. 15.2 0.205 It is only available for	J
45		the robust SF4B-□G□ <v2>.</v2>	

It is only available for the robust type SF4B-□G□<V2>

BER ENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

> MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components

Optical Touch Switch Control Units

Units

Definition of Sensing Heights

SF4B-C SF4C

SF2C SF4B

SF4B SF2B

LASER SENSORS PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

PARTICULAR SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION

DEVICES LASER MARKERS

PLC HUMAN MACHINE INTERFACES COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Control Definition of Sensing Heights


SF4B-C SF4C SF2C

SF4B SF2B BSF4-AH80

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.


Not available for the robust type SF4B- \square G \square <V2> Intermediate supporting bracket (Accessory for light curtain) MS-SFB-2

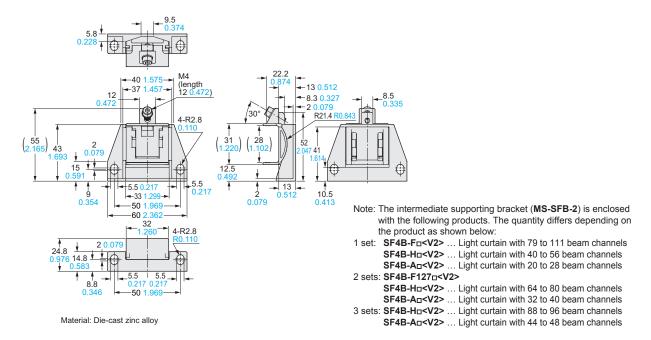


MS-SF4BG-2

It is only available for the robust SF4B-¬G¬<V2>. Intermediate supporting bracket (Accessory for light curtain)

Rear mounting

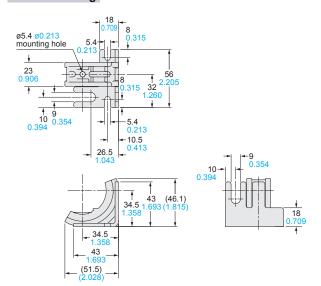

Side mounting

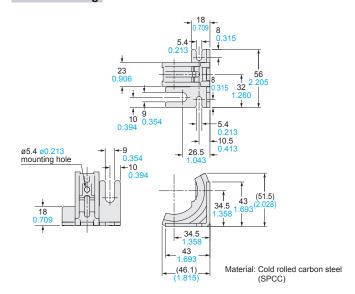

Note: The intermediate supporting bracket MS-SF4BG-2 is enclosed with the following products. The quantity differs depending on the product as shown below:

1 set: SF4B-F□G<V2> ... Light curtain with 79 to 127 beam channels SF4B-H□G□<V2> ... Light curtain with 40 to 64 beam channels SF4B-A□G<V2> ... Light curtain with 20 to 32 beam channels

2 sets: SF4B-HaGa<V2> ... Light curtain with 72 to 96 beam channels SF4B-A□G<V2> ... Light curtain with 36 to 48 beam channels

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

Not available for the robust type **SF4B-□G□<V2>** Dead zoneless mounting bracket (Optional) MS-SFB-3 Main body 2-R4 4-R2.8 6.8 26 15 10.8 50 (4 (length 10 0.39 9.5 0.374 ---39 1.535-**←** 8.5 0.335 -51 2.008 -59.5 **2.343**-12 0.472 → 26 -68 <mark>2.677</mark> Spacer 17.3 0.681 3-R1 R0.039 Material: Die-cast zinc allov 2-R3 R0.118 Four M5 (length 25 mm 0.984 in) hexagon-socket-head 4.5 8.4 0.331 20 0.787 bolts and four spacers are attached. -59.5 L-shaped mounting Mounting adjustment range 20 0.787 (Note) 0. The adjustment range of the light curtain angle is up to ±15 degrees. 26

> Note: The finger protection type has a beam pitch of 10 mm 0.394 in, which produces a dead zone. Additional measures will be required, such as using a protection cover.

> > 28


MS-SF4BG-3 Dead zoneless mounting bracket (Optional)

-38

It is only available for the robust SF4B-GG<V2>.

-17 0.669


Main body

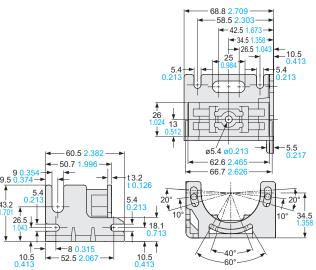

Material: Dead zoneless mounting bracket Cold rolled carbon steel (SPCC) (Trivalent chrome plated) Dead zoneless supporting bracket ··· PPS

Mounting adjustment range

The adjustment range of the light curtain angle is up to ±10 degrees.

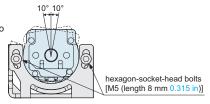

MS-SFB-4 Pitch adapter bracket (Optional)

Not available for the robust type SF4B-□G□<V2>

/ M5

63.5 0.709 .276 74.5 45.5 85.5 (Sliding range) Material: Die-cast zinc allov Four bracket set Four M5 (length 18 mm 0.709 in) 4-R2.8 R0.110 10 hexagon-socket-head bolts are 18 attached. M5 (length 60° 30° 15 0.50 M5 (length R18.4 R0.72 R16.6 R0.654 14

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

Safety Componen

Optical Touch Switch Control Units

SF4B-C

SF4C SF2C

SF2B

605

FIBER SENSORS

LASER SENSORS PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

PARTICULAR SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION LASER MARKERS

PLC HUMAN MACHINE INTERFACES

FA COMPONENTS MACHINE VISION SYSTEMS

CURING SYSTEMS

Definition of Sensing Heights


SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

MS-SFB-4-T

Not available for the robust type **SF4B-**□**G**□**<V2>** M8 pitch adapter bracket (Optional)

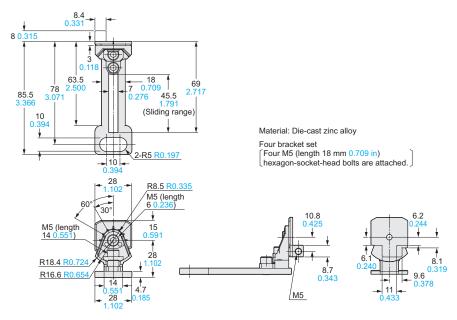


MS-SFB-1-T2 (Rear mounting)

M8 rear mounting bracket (Optional) M8 rear / side mounting brackets set (Optional)

Not available for the robust type SF4B-□G□<V2>

Mounting adjustment range

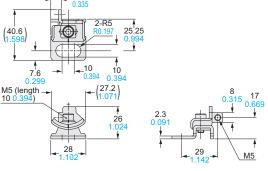


The adjustment range of the light curtain angle is up to ±15 degrees. 28 R20.2

Material: Cold rolled carbon steel (SPCC) (Trivalent chrome plated)

Four bracket set Four M5 (length 18 mm 0.709 in) hexagon-socket-head bolts are attached.


MS-SFB-8-T MS-SFB-1-T2 (Side mounting)

M8 side mounting bracket (Optional) M8 rear / side mounting brackets set (Optional)

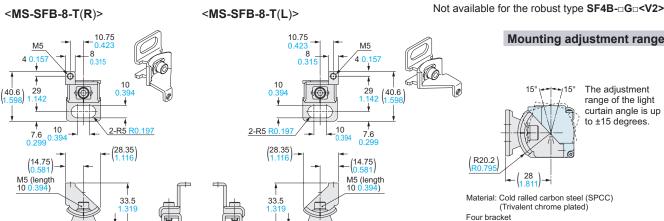

2.3 0.091

Mounting adjustment range

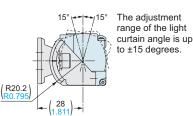

Material: Cold ralled carbon steel (SPCC) (Trivalent chrome plated) Four bracket (two pcs. each of R type and L type) set Four M5 (length 18 mm 0.709 in) hexagon-socket-head bolts are attached.

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

SF-C12

SF-C11 Control unit (Optional) 40 23 0. Receiver side **≱** 35 48.8 11.37 67.3 <u>1</u> 2.650 connector Emitter side 3 × 6 = 18 0.709 6 0.23 130 5.118 connector 6.5 0.256 _10

2-ø6 ø0.236 80 8.150 2-ø10 ø0.394 6 30 1.181 7 0_:276 ₀ 6.5 21 0 8 0.315 130 28 81.4 19.5 22 24.5 30.5 36.5


SF-C13 Control unit (Optional)

Suitable for 35 mm 1.378 in width DIN rail


6.75 35 34.5 67.3 2.650 $3 \times 5 = 15$

130 91.6 3.606 13 0.512 80 22.5 13.5 0.531 Suitable for 35 mm 1.378 in width DIN rail


Application expansion unit (Optional) SF-C14EX(-01)

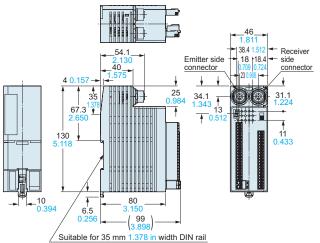

SFB-HC Handy-controller (Optional)

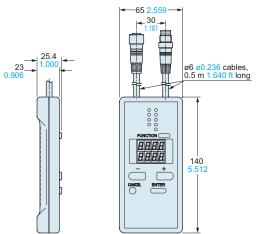

SFB-WY1 Y-shaped connector (Optional)

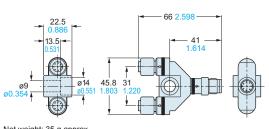

Net weight: 35 g approx.

LASER SENSORS

Control unit (Optional)

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Safety Components Optical Touch Switch

Control Units

SF4B-C SF4C

SF2C

SF2B BSF4-AH80

PHOTO-ELECTRIC SENSORS MICRO PHOTO-

AREA SENSORS

COMPONENTS

PRESSURE /
FLOW
SENSORS

PARTICULAR USE SENSORS

SIMPLE WIRE-SAVING UNITS

SENSOR OPTIONS

MEASURE-MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units Definition of Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B

BSF4-AH80

DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

It is not available for the robust SF4B-□G□<V2>.

SF-LAT-4BG

Laser alignment tool (Optional)

Center of beam axis

(21)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)
(0.827)

It is only available for the robust SF4B-□G□<V2>.



